

I. About Your QUIK50

Your new **QUIK50** is designed to control up to four individual components. This single universal remote integrates 177 pre-programmed (brand) codes, providing compatibility with almost all TV's, VCR's, and Cable Converters which can be controlled by infrared remote.

Please retain these instructions for future reference.

This Gemini remote control cannot be used with TV's whose original remote has a program/lock switch.

II. Battery Requirements

Your **QUIK50** requires four (4) "AAA" size, high quality alkaline batteries. To insert or replace the batteries:

1. Locate the battery cover on the back of the remote and remove it by inserting your fingernail into the slot at the top, pulling down and out.
2. Remove the old batteries, if necessary, and insert the new batteries, observing the required polarity, as indicated inside the battery compartment.
3. Replace the battery cover by inserting the two tabs on the bottom of the cover into the housing. Snap the cover back into its locked position.
4. When replacing the batteries, your **QUIK50** will only retain its memory for approximately 15 minutes, once the batteries have been removed. Should this time limit be exceeded, or if weak or bad batteries had been

left in the remote for an extended period of time, the **QUIK50** may need to be reset. If resetting is necessary, locate the reset button in the lower left corner of the battery compartment. Gently press in this button using a small screwdriver or the tip of a pen.

NOTE: Resetting your **QUIK50** may require that you re-program all previously entered brand codes.

III. Key Functions

1. **MODE KEYS (TV, VCR, CTV, AUX)**
Press to select the device mode desired.
2. **POWER (PWR)**
Press to power the selected device ON and OFF.
3. **VOLUME CONTROL (+/-)**
Press the volume "+" or "-" keys to raise or lower the TV's volume level, respectively. In the VCR and CTV modes, volume and mute controls will always affect the TV set.
4. **CHANNEL SCAN (+/-)**
Momentarily press the channel "+" or "-" keys to scan to the next higher or lower channel, respectively. Press and hold these same keys for a continuous scan of all available channels.
5. **SLEEP (SLEEP)**
Press to activate the sleep timer function. (See "Sleep Timer" for complete instructions).
6. **MUTE**
Press to turn TV sound ON and OFF while the picture remains.



7. **RECALL (RCL)**
Press to switch back and forth between the last two channels entered.
8. **CHANNEL SELECTION (0-9)**
Use this numeric keypad to select the specific channel desired.

NOTE: Some TV sets require that a "0" be entered before a one digit channel; others require that the "ENTER" key be pressed after the channel is selected.

9. **TV/VCR**
Press to toggle VCR between the TV and VCR viewing modes. (Refer to your VCR operating guide for further instructions).
10. **ENTER (ENT)**
Press after numeric channel selection has been entered.
11. **REWIND (◀◀)**
Press to rapidly rewind tape from STOP mode (picture and sound absent). Press to quickly scan picture in the reverse direction during PLAY mode.
12. **PLAY (▶)**
Press to begin tape playback.
13. **FAST-FORWARD (▶▶)**
Press to rapidly advance tape from STOP mode (picture and sound absent). Press to quickly scan picture in the forward direction during PLAY mode.
14. **STOP (■)**
Press to stop the tape during playback, record, fast-forward or rewind modes.
15. **PAUSE (||)**
Press to view a "still" picture during playback or to momentarily stop recording.

16. **RECORD (●)**
Press this key until the recording indicator on your VCR illuminates.

* These keys may perform other special functions, depending on the Brand Code entered. Simply trying these keys is the best way to determine their particular function on your brand and model component.

IV. Programming Your QUIK50

Before you can use your **QUIK50** universal remote, it must be programmed, using the Brand Codes listed at the end of these instructions. Once this simple one-time setup has been performed, this single remote will operate all the major functions of your current remotes for up to four components.

NOTE: See section entitled "Battery Requirements" before proceeding.

1. Under the appropriate device (TV, VCR, CTV), locate the 3-digit brand code(s) which corresponds to the name brand of your component.
2. Press and hold the "RCL" and "ENT" keys simultaneously, until the red indicator light turns on (about 3-4 seconds).
3. Select the type of device you are programming by pressing the "TV", "VCR", "CTV", or "AUX" key.

NOTE: The "CTV" and "AUX" device modes can be used to program an additional TV, VCR, or CABLE device.

4. Using the numeric keypad, enter the 3-digit brand code which

corresponds to your component. If a valid code was entered and recognized, the indicator light will turn off as the last digit is entered.

NOTE: If the indicator light flashes twice, an invalid code was entered, and you must re-enter a brand code. If the indicator light turns off at any point before the 3-digit code is accepted, you must repeat steps 2-4.

- Test the brand code entered by aiming your **QUIK50** at the selected component and pressing the "PWR" key. If the component responds, a valid code was entered. If there is no response, select the next available brand code and repeat steps 2-5.

NOTE: In order to determine which brand code (if multiple codes are listed) will provide the maximum number of compatible functions, try all of the codes available for your particular brand component(s).

- Repeat steps 1-5 for up to three remaining components.

NOTE: When attempting to program a TV/VCR combo unit (i.e. a TV set with a built-in VCR), if the device does not respond in the "TV" mode setting, try programming your **QUIK50** in the "VCR" mode setting.

NOTE: Entering a new brand code will automatically replace the previous code.

If you are unable to program your **QUIK50** easily using the codes listed for your brand, you can search the entire code list using the built-in "Autosearch" option.

- Record your brand codes below (and on the back label) for future reference.

TV: _____

VCR: _____

CTV: _____

AUX: _____

V. Autosearch Instructions

- Turn on the device you wish to program the **QUIK50** to operate.
- Press and hold the "RCL" and "ENT" keys simultaneously, until the red indicator light turns on (about 3-4 seconds).
- Select the type of device you are programming by pressing one of the "TV", "VCR", "CTV" or "AUX" mode keys. Now enter one of the following device type search codes:

TV 990	VCR 992	CABLE 994
-----------	------------	--------------

NOTE: The "CTV" and "AUX" device modes can be used to program an additional TV, VCR or CABLE device (see step 8 below).

- Aim the **QUIK50** at the device you are trying to program and press the red "PWR" key. If your device turns off, press the appropriate device mode key again (i.e. "TV", "VCR", "CTV" or "AUX") to lock in the brand code for that particular device and exit from the programming mode.
- If your device does not respond, press the VOL "+" key once to advance to the next brand code. Now press the "PWR" key again. Remember to immediately lock in your code when the component turns off by pressing the proper

mode key. Continue repeating steps 4 & 5 until your device turns off.

NOTE: If the red indicator light blinks twice after pressing the VOL "+" key, you have reached the end of the brand code library. Press the VOL "-" key, followed by the "PWR" key, as described in steps 4 & 5 above, to search through the code library in the opposite direction. Continue until your device responds, or the red indicator light once again blinks twice, indicating that the entire code library has now been searched for the particular code device type.

- Test the brand code entered by aiming your **QUIK50** at the selected component and trying all of the function keys available for this device. If the component responds, a valid code was entered.
- Repeat steps 1-6 for up to three remaining components.
- To program a second TV, VCR or CABLE device, use the "CTV" or "AUX" device modes only and repeat steps 1-6. Once the device responds, press the appropriate mode key ("CTV" or "AUX") to exit the programming mode.

NOTE: When using autosearch, be patient. You may have to try as many as 70 codes before finding one that is compatible with your equipment. Reminder: If the red indicator light blinks twice you have reached the end of the code library. Continue to search through the code library, using the "PWR" and "VOL" "-" keys, as described above.

VI. Using Your QUIK50

- To turn on a component, you must first press the appropriate

device key (TV, VCR, CTV, or AUX) followed by the red "PWR" key.

The remote will always control the component which was selected last, except as follows:

- All VCR control functions, except "CH +/-", are active regardless of the device mode selected.
- The "VOL +/-" and "MUTE" functions will always control the TV, regardless of the device mode selected.

To select another component, simply press that component's device key (component must be on) or press the device key and "PWR" key.

To turn off a component, press the device key and "PWR" key again.

- During normal operation, the red LED indicator light will flicker with any key depressed. If this indicator light slowly flashes twice after pressing any key, the batteries are weak and need to be replaced. To avoid having to re-program your **QUIK50**, replace all four batteries as soon as possible. (Refer to the "Battery Requirements" section of this booklet for further instructions.)
- To get the most enjoyment out of your new **QUIK50**, DO NOT...
 - Place any heavy objects on top of the remote;
 - Expose the unit to dust, strong sunlight, heat, humidity, or mechanical shock;
 - Mix old and new batteries together;

- Disassemble the unit, as it contains no user-serviceable parts and will automatically void your warranty.

VII. Sleep Timer

Gemini's exclusive Sleep Timer lets you program your TV to turn off automatically - at the touch of a button. Once activated, the Sleep Timer allows your set to stay on for 60 minutes and then turns it off - perfect for late night TV watching.

As with all infrared remote controls, the **QUIK50** must be pointed at your TV to function properly. Before activating the Sleep Timer, try this simple test: Place your **QUIK50** on a coffee table or nightstand, point it toward your TV and turn the power on or off. If the TV responds, you've found the perfect spot to place your remote. If the TV does not respond, move the **QUIK50** closer, to the left or to the right, and try again.

- To activate Sleep Timer function:
 - TV must be turned on.
 - Press and hold "SLEEP" key until LED lights.
 - LED will go out after approximately 2 seconds. Timer is now activated.
 - Television will automatically turn off in 60 minutes.
- Important: After activating timer, remote must remain aimed at TV.**
- To cancel Sleep Timer function:
 - Press and hold "SLEEP" key for 2 seconds.
 - LED will blink once to confirm cancellation.

VIII. Troubleshooting

If you have a problem or question regarding the setup or operation of your **QUIK50**, please read this section before you write to GEMINI.

1. Can I program more than one TV, VCR, or Cable Converter at a time?

Answer: **YES**...The "CTV" and "AUX" device modes on your **QUIK50** are programmed to accept any device brand code (i.e. TV, VCR, or CABLE).

2. The QUIK50 was programmed and working, but now will not work for one or more of my components.

Solution(s): a,b,c,d,e,f,g,h.

3. I've tried all the brand codes listed for my component and none of them work.

Solution(s): f,h.

4. The QUIK50 was working with my cable box and now it no longer functions.

Solution(s): g,h,i.

5. The range on my QUIK50 has decreased considerably.

Solution(s): d,g,h.

6. The brand code selected only partially controls my component.

Solution: j.

IX. Solution(s)

a. Select the proper device mode, using the "TV", "VCR", "CTV", and "AUX" keys, for the component in use.

b. Move closer to the component and try angling the **QUIK50** up and down while pressing any of the function keys for that component.

c. Re-program the brand code

which previously worked with this component.

d. Check the red LED indicator for signs of weak batteries, and replace them if necessary.

e. Reset the **QUIK50** (refer to the section "Battery Requirements") and re-program all of the brand codes previously entered.

f. Consult the owner's manual, or check with the manufacturer of the component to determine if it is remote control compatible and operates by infrared (IR) control.

g. Clean the plastic window on both the **QUIK50** and the component.

h. Use the original remote control to determine if the infrared receiving sensor is damaged on your component.

i. Since some cable converter boxes are addressable, check with your cable company to see if an access fee is required for the remote control device.

j. Try all of the remaining brand codes for your particular component.

If after reading this section you cannot solve the problem with your **QUIK50** or if you have any questions not covered in this booklet, you can write to us at 215 Entin Road, Clifton, NJ 07014; Attention: Technical Support.

Please give a brief explanation of your problem or question and include your daytime phone number and the best time to reach you, should one of our representatives require additional information.

Warning

This equipment generates and uses radio frequency energy. If not used properly, it may cause interference to radio and TV signals. It has been type tested and found to comply with the FCC limits for a Class B computing device, which requires reasonable protection against such interference. However, there is no guarantee that interference will not occur. If this equipment causes interference to the radio or TV reception, try the following: Reposition the receiving antenna. Move the remote control further away from the receiver. If necessary, consult your dealer or an experienced radio/television technician for additional suggestions.

Warranty

Gemini Industries, Inc. warrants to the original retail purchaser that if this product proves to be defective in material or workmanship within 90 days from date of original purchase, this product will be replaced without charge for parts or labor. To obtain replacement under this warranty, the purchaser must return the product to the retailer where it was originally purchased together with a dated receipt.

This warranty does not apply if the product has been damaged through mishandling, misuse, neglect, accident, or if the consumer has attempted to alter the product in any way.

THESE ARE NO OTHER WARRANTIES, EXPRESSED OR IMPLIED (INCLUDING MERCHANTABILITY) OTHER THAN WHAT IS STATED ABOVE. No one is authorized to assume any other liability for Gemini Industries, Inc. in connection with the sale of this product.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage. Thus, the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

TV Codes

Admiral	400, 530
Akal	160, 240, 550
Amark	390, 590
Amstrad	110
Anam	170
Anam National.....	420
AOC	180, 240, 300
Bell & Howell	530
Candle	060, 080, 300, 310
Centurion	190, 580
Citizen	060, 080, 140, 300, 310, 390
Concerto	310
Contec	170, 260, 470
Corando	390
Coronado	590
Craig	170
Curtis Mathes.....	030, 140, 190, 300, 390, 400, 530, 580
CXC	170
Daewoo	180, 340, 380, 390
Daytron	190, 390, 580
Electrohome	160, 390
Emerson	020, 110, 150, 170, 240, 280, 330, 390, 470, 590, 650
Envision	300
Fisher	200, 460
Funai	020, 170
GE	010, 040, 290, 400, 420, 630
Goldstar	180, 190, 240, 310, 390, 590
Hitachi	100, 260, 310, 320, 390, 590
Infinity	270
JBL	270
JVC	030, 250, 370
JC Penney	040, 180, 190, 240, 290, 300, 390, 400, 440, 500, 630
Kloss Novabeam	490
KMC	390, 590
KTV	170, 240, 390, 590
Lloytron	390
Lodgenet	530
Logik	530
Logix	530
Luxman	310
LXI	000, 190, 210
Magnavox	080, 120, 130, 190, 270, 300, 390, 450, 490, 580, 590, 630
Majestic	530
Marantz	160, 240, 300, 450, 490
Memorex	530
MGA	020, 160, 180, 190, 230, 240, 300, 580

Mitsubishi020, 160, 180, 190, 230, 240, 580
Mitsubishi Unified160
MTC140, 180, 300, 310
National010, 270, 420, 510, 570, 610
NEC180, 190, 240, 300, 310, 580, 620
NEC Unified300
Panasonic010, 270, 420, 510, 570
Philco080, 120, 130, 180, 240, 270, 300, 390, 450, 490, 540, 590
Philips080, 120, 130, 180, 270, 300, 450, 490, 540, 560, 590
Portland390, 590
Proton240, 390
Quasar010, 420
Radio Shack070, 170, 190, 390, 410
RCA090, 180, 240, 500, 600
RCA Unified400
Realistic070, 150, 170, 190, 390, 410
Sampo190, 300, 580
Samsung140, 180, 190, 300, 310, 390, 410, 580, 590
Sanyo200, 430, 460
Scott020, 190, 390, 580
Sears020, 140, 190, 200, 210, 390, 430, 440, 460, 590
Sharp000, 050, 070, 390, 590
Sony350, 550, 640
Sony Unified350
Soundesign080, 240
SSS170, 180
Sylvania080, 120, 130, 190, 270, 300, 360, 450, 490, 580, 630
Tatung420
Techwood310
Teknika020, 060, 080, 140, 190, 170, 180, 270, 310, 390, 480, 530, 590
Telerent390, 530
Thomson (Proscan)400
TMK240, 310
Toshiba140, 200, 210, 220, 440
Totevison390
Universal040, 290
Vidtech180
Wards020, 040, 070, 120, 130, 180, 190, 240, 270, 290, 300, 390, 450, 530, 580
Yamaha180
Yorx190, 580
Zenith Unified520

VCR Codes

Akai002, 052, 112, 202, 372, 402
Amstrad072
ASA022
Audio Dynamics202, 292
Awai392
Broksonic282
Candle022
Canon272
Citizen022
Craig092, 182
Curtis Mathes272
Daewoo062, 232, 342
Daytron232
DBX202, 292
Dual202
Dynatech072, 142
Electrohome022
Emerson042, 072, 082, 102, 112, 132, 192, 242, 282, 472, 482
Ferguson202
Finlux072
Fisher092, 322, 332
Funai072
GE182, 272, 422
Goldstar022, 292
Graetz202
Harmon Kardon292
Hitachi032, 072, 202
Instant Replay272
ITT202
JCL272
Jensen202
JVC012, 202, 252
JC Penney022, 032, 272, 292, 302
Kenwood202, 252, 312
Lloyd072
Magnavox272, 452
Marantz272, 292, 452
Marta022
MEI272
Memorex022, 072, 272
MGA022, 192, 212
Minolta032
Mitsubishi022, 192, 212, 442
Mitsubishi Unified212
MTC072, 182
Multitech072
National272
NEC202, 252, 292, 302
Nordmende202

Universal Remote

Control Remoto Universal

Quik50

with Sleep Timer

Con Reloj del Sueño

Operating Guide

Instrucciones para el usuario

GEMINI