

## CROSSOVER CONTROLS

While in one component mode, your Jensen allows you to use features of other components. The following chart lists which functions crossover to other components.

Selected Component	Crossover Component	Crossover Functions
VCR or CABLE	TV	Volume +/-, MUTE
TV or CABLE	VCR	VCR Keys: (▶, ◀, ⏪, ⏩, ⏸, ⏹, ⏺) Play, Rewind, Fast Forward, Stop, Record, Pause

## SLEEP TIMER

Your Jensen is equipped and programmed with a Sleep Timer function, separate from your TV or for a TV not equipped with Sleep Timer. This feature will program your remote control to turn off your TV up to 99 minutes from now.

1. Hold the "TV" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Press the "Power" key.
3. Press numerical keys 01-99 for the desired amount of minutes. (Example: 01 = 1 minute; 99 = 99 minutes) When the programmed number of minutes has elapsed, the Jensen will turn off your TV.
4. Your Jensen must be pointed at your TV for the Sleep Timer to work properly.

To cancel Sleep Timer:

1. Repeat steps 1-3 from above.
2. Enter the number "00" with the numerical keys to cancel Sleep Timer.

Note: Your Jensen can be used to control all functions and devices once the Sleep Timer has been programmed.

## TROUBLE SHOOTING

**Problem**  
No power in remote control (no light).

**Solution**  
Check battery installation and battery freshness.

**Problem**  
The green light did not flash after the code was entered.

**Solution**  
Enter the code within 30 seconds after you release the device key ("TV", "VCR", "Cable", "CD"). Try the code again.

**Problem**  
Code enters into remote, but the component doesn't respond.

**Solution**  
Try the next code on the list. One of the codes should work your component.

**Problem**  
None of the codes work the component.

**Solution**  
After trying all of the codes, try Code Scan or Auto Code Scan.

## HELPFUL HINTS

- Enter only one 3-digit code at a time.
- The first code listed isn't always the one for your component.
- If none of the codes on the list work, try Code Scan or Auto Code Scan.
- Enter the code within 30 seconds after releasing the device key ("TV", "VCR", "Cable", "CD").
- If you remove the batteries for any reason, you have 25 minutes in which to replace them without having to re-enter your device codes.

## WARRANTY

### 30 DAY SATISFACTION GUARANTEE

Recoton Corporation (the Company) warrants to the original retail purchaser of this product, that should you be dissatisfied with this Wireless product for any reason during the first thirty days, we will refund your money. Call 1-800-RECOTON to obtain information regarding the procedure for receiving a refund.

### ONE YEAR LIMITED WARRANTY

Recoton Corporation (the Company) warrants to the original retail purchaser of this product that should the product or any part thereof be proven defective in material or workmanship within One Year from the date of original purchase, such defects will be replaced without charge for parts or labor. This warranty does not apply to any incidental or consequential damages.


To obtain replacement within the terms of this warranty, the product should be delivered, transportation prepaid, to the Dealer where purchased or to the Company, along with proof of date of purchase. Call 1-800-RECOTON to obtain information regarding the procedure for proper return of your product, if your Dealer does not honor the warranty.

**THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT OR PART THEREOF WHICH HAS BEEN DAMAGED THROUGH ALTERATION, MISHANDLING, MISUSE, NEGLIGENCE OR ACCIDENT. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND NO PERSONS OR REPRESENTATIVE IS AUTHORIZED TO ASSUME FOR THE COMPANY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGE SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.**

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

### NON-WARRANTY SERVICE

If non-warranty service is required, the product may be sent to the Company for repair/replacement, transportation prepaid, by calling 1-800-RECOTON for details, complete instructions, and service fee charges.

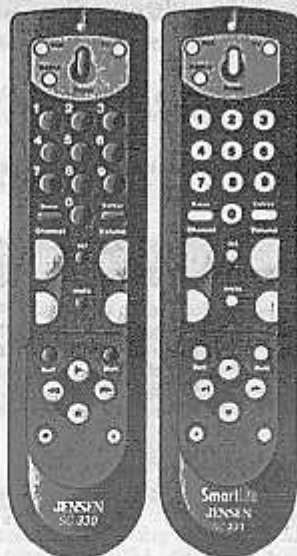

# JENSEN®

## USER GUIDE

### SC330 SC331 SC340

Customer InfoLine:  
TOLL FREE 1-800-962-3986  
www.solecontrol.com  
KEEP FOR FUTURE USE  
Part No. 2426-330J

### JENSEN®

A Division of Recoton Corp.  
2950 Lake Emma Road  
Lake Mary, FL 32746  
© 1997 Recoton Corp. All rights reserved.  
All specifications subject to change without notice.

## INTRODUCTION

### Important note for new owners.

Thank you for purchasing a Jensen remote control. Right now, your remote will not work any device. You will need to install the batteries and then program the remote control.

### Installing the Batteries:

1. On the back of the Jensen remote control, push the lever up and pull off the battery cover.
2. Install 2 "AAA" batteries, making sure the + and - marks match the diagram inside.
3. Replace the battery cover.
4. Test batteries by holding down a device key ("TV", "VCR", "CABLE", "CD") until the green indicator light comes on above the "Power" key. The green indicator should come on after approximately 3 seconds.

**NOTE:** If you remove the batteries for any reason, you have 25 minutes in which to replace them. If you wait longer than 25 minutes, the codes which you have programmed in the remote control may need to be reprogrammed.

### Programming the Remote Control:

To program the remote, you will need to locate the 3-digit code numbers for your device and brand in the Code Listing. There probably is more than one code listed because manufacturers make more than one model of remote control. However, one of the codes should work your component.

It is important to know that the first code listed isn't necessarily the one that works your component. You may need to try more than one code. Enter the codes into the remote until the correct one is installed, following the instructions for TV, VCR, Cable or CD Set-up.

The Jensen will now replace your original remote controls.

## TV, VCR OR CABLE SET-UP

1. Manually, turn on the device that you've set up (TV, VCR or Cable). In the listing, find the 3-digit code numbers to device brand.
2. Hold the device key ("TV", "VCR", "Cable", "CD") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key. Within 30 seconds enter in the 3-digit code number. The light will flutter when a successful code is entered.
4. Test the code by pressing the "Power" key. The device turns off, you have chosen the correct code.\* If it does not, return to Step 2 and use the next 3-digit code on the list.

\*If the code does not work all component functions, try the next code on the list.

**NOTE:** If none of the codes turn off your device, try Code Scan or Auto Code Scan.

## CD SET-UP (SC-340 ONLY)

1. Turn on your CD player and insert a CD from the code listing, find the 3-digit code number for your CD brand.
2. Hold the "CD" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the "CD" key. Within 30 seconds enter in the 3-digit code number. The light will flutter when a successful code is entered.
4. Test the code by pressing the "▶" key. If the CD plays, you have chosen the correct code.\* If it does not, return to Step 2 and use the next 3-digit code on the list.

\*If the code does not work all component functions, try the next code on the list.

**Note:** If none of the codes work your CD player, try Code Scan or Auto Code Scan.

## USING THE JENSEN

After you have programmed the remote control to operate multiple components, follow these steps to operate the Jensen:

1. Press the key of the component that you want to control ("TV", "VCR", "Cable" or "CD").
2. Press the "Power" key to turn on the component if it is not already "on".
3. Press the key of the function you wish to perform. (See Key Function Diagram)

## CODE SCAN

Code scan is another way of finding the correct code for your component. In this method, the remote will scan through all of the codes which are contained in the remote control's memory until it finds your code.

1. Manually, turn on the component that you want to set up (TV, VCR, Cable or CD).
2. Hold the device key ("TV", "VCR", "Cable", "CD") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key.
4. Press "0"-"0"-"0" within 30 seconds. The green light will remain on during the Code Scan process.
5. Press the "Power" key repeatedly until your component turns off. The green light will flicker each time the "Power" key is pressed.
6. As soon as your component turns off, press the "Enter" key. This will save the code.

## AUTO CODE SCAN

The auto code scan feature allows you to set up your components without having to enter in code numbers. The Jensen will do the work for you!

1. Manually, turn on the component that you want to set up (TV, VCR, Cable or CD).
2. Hold the device key ("TV", "VCR", "Cable", "CD") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key.
4. Press the "Surf" key within 30 seconds. The green light will remain on during the auto code scan process.
5. As soon as your device turns off, press the "Enter" key. This will save the code. You have one second in which to press the "Enter" key. Otherwise, the code will not be saved and you will need to return to Step 1 and start over.

## CODE READBACK

If you did not write down the code numbers when you programmed your remote control and you haven't removed the batteries, your Jensen can tell you what your codes are. Just follow these instructions.

1. Hold the device key, of the component for which you would like to know the programmed code ("TV", "VCR", "Cable", "CD"), down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Release the device key.
3. Press the "Enter" key.
4. Count the number of times the green light blinks. There will be three numbers, separated by a two-second pause.  
Example: 4 blinks-pause-1 blink-pause-10 blinks-410  
Note: 10 blinks=0

Make sure you write the code numbers below for future use!

TV     \_\_\_ - \_\_\_ - \_\_\_  
VCR   \_\_\_ - \_\_\_ - \_\_\_  
CABLE \_\_\_ - \_\_\_ - \_\_\_  
CD     \_\_\_ - \_\_\_ - \_\_\_

## SC-331 SMART LITE INSTRUCTIONS

To turn on the light on your Smart Lite SC-331 remote control:

1. Press any key on the remote control. The remote control will light up and stay on for 2 seconds.

The light will automatically turn off after 2 seconds without a key press. This helps to conserve the batteries.

## SURF (TV CHANNEL SCAN)

The Surf feature allows you to scan through the TV channels without having to keep pressing the "Channel +" key. The Surf feature is currently programmed at a speed of 6. However, you can program the speed at which you Surf through the channels to be faster or slower than the current setting.

To program the speed of the Surf feature:

1. Hold the "Surf" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Press a number key, 1 (fastest) through 9 (slowest), relating to the speed in which the Surf feature will scan through the channels.

To start Surfing:  
Press the "Surf" key.

To stop Surfing:  
Press any key on the remote control.

## MULTI FUNCTION SEQUENCE

The Multi feature allows you to perform multiple functions (a series of up to 10 remote control key presses) with the press of one key. For example, you can program your remote to turn on the TV, turn to Channel 9, turn on the VCR, and record with one key press.

A. To program a Multi function sequence (see example before following these steps):

1. Hold the "Multi" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Press the component mode key ("TV", "VCR", "Cable", "CD") of the device that you want to control. (The Jensen must be programmed for each device that you are using in the Multi function sequence.)
3. Press the function keys which correspond to the component mode you are in.
4. Only if your multi function sequence has less than 10 key presses, press the "Multi" key.

The following is an example of how to program a Multi function sequence (with 6 key presses) that will turn on the TV, turn to channel 9, turn on the VCR, and record:

1. Hold the "Multi" key down until the green indicator lights comes on.
2. Press the "TV" key. Key press #1
3. Press the "Power" key. Key press #2
4. Press the "9" key. Key press #3
5. Press the "VCR" key. Key press #4
6. Press the "Power" key. Key press #5
7. Press the "0" key. Key press #6
8. Press the "Multi" key because this multi function sequence contains less than 10 key presses.

B. To perform the programmed Multi function sequence:

Press the "Multi" key.

Note: If you want to change your Multi function sequence, follow the steps to program a Multi function sequence. Your old Multi will be re-

## KEY DESCRIPTIONS

1. Green LED Indicator: This light will turn on or blink depending on the function that you are performing. The instructions in this manual will explain the normal operation.
2. Power key: Press this key to turn the selected device on or off.
3. TV mode key: Press this key to control your TV features.
4. CD mode key (SC-340 only): Press this key to control your CD player features.
5. 0-9 keys: Press these keys for numerals or CD tracks.
6. TV/VCR key: Press this key to switch between the TV and VCR mode.
7. Volume (+) key: Press this key to increase the volume.
8. Volume (-) key: Press this key to decrease the volume.
9. Mute key: Press this key to mute the sound.
10. Multi sequence key: Press this key to program or perform a multi sequence functions.
11. Fast forward key: Press this key to fast forward a videotape or CD.
12. Stop key: Press this key to stop the playback recording, rewinding or fast forwarding of videotape. In CD mode, press this key to stop the playback of a CD.
13. Pause key: Press this key to pause the recording or playback of a videotape. Press again to resume recording or playback. In CD mode, press this key to pause the playback of a CD.
14. Record key: Press this key to start recording a program.
15. Rewind key: Press this key to rewind videotape or CD.

16. Play key: Press this key to start or resume the playback of a videotape or CD.

17. Surf key: Press this key to scan through the channels. Also, this key is used in the Auto Code Scan option.

18. Channel (-) key: Press this key to go down a channel or CD track.

19. Channel(+) key: Press this key to go up a channel or CD track.


20. Recall key: Press this key to switch to the last channel that you were viewing. In CD mode, press this key to repeat a CD track or random play.

21. Enter key: Press this key to enter in a channel. In CD mode, press this key to enter in a track number 10 or to skip or shuffle disc.

22. Cable mode key: Press this key to control your cable features.

23. VCR mode key: Press this key to control your VCR features.

## KEY FUNCTION DIAGRAM

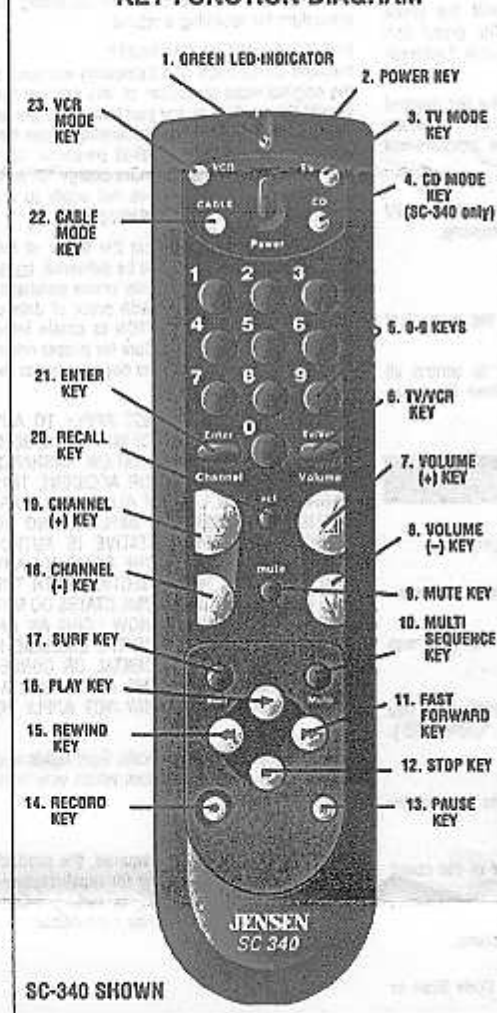

SC-340 SHOWN

# JENSEN

## SC-300 SERIES CODE LIST

### TV CODES (SC-310, SC-320, SC-330, SC-331, SC-340)

A Mark 450	Hitachi 468 459 450 443 441	Proton 454 450 437 428 422
Action 410	440 437 436 428 423	408 406
Admiral 460 443 442 437 434 432	422 419 478	Pulsar 459 453 428 408
Advent 448	Infinity 428	Quasar 463 441 437 411
Alkal 440 438 408	Inteq, Also see Zenith 432	Radio Shack, Also see Optimus/
Anam 422	JBL 428	Realistic 450 445 440
Anam National 411	JC Penney 473 482 481 451 450	437 434 427 422 413
AOC 482 459 453 450 428	441 437 422 408 406	411 410 408
408 406	Jensen, Also see NEC 408	RCA, Also see Proscan 473 482
Audiovox 410	JVC 473 444 441	481 458 457 450 437 428
Baycraft 442 436 428	Kawasho 438 406	422 411
Bell & Howell 460 443 434 432	Kenwood 428 408 406	Rent-Go 446
Braksonic 454 434 422 408 402	Kless Novabeam 411	Runco 460
Candle, Also see Citizen 473 459 455	KMC 450	Sampo 441 428 411 406
454 450 444 434 428 422	KTW 464 450 428 422 410 406	Samsung 473 450 443 434 428
408 406	Lloyds 453 440 428	408 406
Citiz 466	Logik 461 460	Sanyo, Also see Fisher / LXI / Sears
Citizen, Also see Candle 454 444	LXI, Also see Fisher / Sanyo / Sears	451 431 427 414
Classic 438 408	481 474 437 434 408	Scott 450 442 428 422 410
Colortyme 473 449 446 437 434	Magnasonic, Also see Daewoo/Funai/	Sears, Also see Fisher / LXI / Sanyo
428 408	Goldstar/Nikko	481 451 450 448 437
Concherta 434	459 443 408	436 434 431 430 427
Contec Com 422 410	Magnavox 455 446 444 443 441	422 414 408
Craig 473 454 422 410	434 428 408 406	Sharp 455 450 446 445 443
Cresley 434	Marantz 434 428 408 406	440 438 431 428 422 413
Crown 450	Matsushita, Also see Panasonic 447	Signature 2080 460 445 427
Curtis 456 446 408	Megatron, Also see Hitachi 436	Silver 408
Curtis Mathes 473 460 450 437 434	Memorex 460 440 427 408	Simpson 408
428 408 406	MGA, Also see Mitsubishi 440 408	Sony 465 450 438 404
CXC 422 410	Mitsubishi, Also see MGA 452 450	Soundesign 428 422 408
Daewoo, Also see Funai/Goldstar/	447 440 441 428 423 408	SSS 422 408 406
Magnasonic/Nikko 467 463	406 405	Sylvania 459 455 446 444 434 430
459 456 450 446 444 428	Montgomery Ward 473 460 446	428 408 406
411 408 406	444 443 437 434 432	Symphonic 474 410 409
Dayton 459 456 450 428	428 422 413 408 406	Tandy 434
Denon 468	MTC 473 459 434 428 427	Tatung 454 424 411
Electrohoma 450 440 428 408	408 406	Technics, Also see Panasonic
Emerson 473 469 450 443 442 428	Multivision 464	441 435
425 422 410 409 408	NAD 408	Techwood 434 408
Envision 408 406	NEC 449 428 408 406	Technika 466 460 459 453 450 428
Fisher, Also see LXI / Sanyo / Sears	Nikko, Also see Daewoo/Funai/	422 410 406
451 448 438 431 427	Goldstar/Magnasonic 459	Totofunken 428
Fortress 408	Nishi 473	TMK 428 408
Funai, Also see Daewoo/Goldstar/	Ihony 481 408	Toshiba 473 452 451 448 444 427
Magnasonic/Nikko	Onwa 422	408 405
474 422 410 409	Optimus, Also see Radio Shack/	Totevision 437
Futuretech 422	Realistic 458	Ultra 459
Garrard 474	469 442	Uniden 438
GE 473 482 481 457 450 441	Panasonic, Also see Matsushita 474	Video Concepts 447 422
437 428 422 412 411 408	463 462 459 441 437 422	Viditron 434
Go Video 473	411 410	Vidtech 406
Goldstar, Also see Daewoo/Funai/	Phillips 444 434 428	White Westinghouse, Also see
Magnasonic/Nikko 453	Pioneer 458 428 411	Emerson/Symphonic 409
432 450 437 428 408 406	Portland 456 450 428 408 406	XR 1000 474 460
Hallmark 408	Prima 461	Yamaha 459 428 406
Harley Davidson, Also see RCA 437	Proscan, Also see RCA 437	Zenith 474 460 459 438 432
Harman Kardon 408		

### VCR CODES (SC-320, SC-330, SC-331, SC-340)

Action 677	Dynatech 668 614	JVC 661 648 644 603 641
Admiral 631	Electrohoma 683 613 608 606	636 630
Alco 628 602	Emerson 694 693 692 691 685 683	Kenwood 673 654 644 603 607
Alkal 643 703 624 616 611	674 669 664 661 659 656	Lloyds 681 673 657 628
Beaumont 610	648 647 628 622 617 614	Logik 662 632
Braksonic 692 691 685 674 659	613 608 606	LXI, Also see Sears/Sanyo/Fisher 628
647 606	Fisher, Also see LXI/Sanyo/Sears	Magnasonic, Also see Daewoo/Funai/
Candle, Also see Citizen 677 664 657	681 668 654 651 615 614	Goldstar/Nikko 677
628 626 623 622 614 610	Funai, Also see Daewoo/Goldstar/	632 608
608 607 606	Magnasonic/Nikko 657	Magnavox 661 656 648 636 634
Canon 626	628 625	632 628 626 614 606
Capohart 623	Garrard 628	Magnin, Also see MGN 610
Citizen, Also see Candle 664 657 628	GE 672 664 648 626 618 610	Marantz 673 607 606
626 614	Genezza 628	Maria 608
Colortyme 664 663 626	Go Video 695 686 633 632 619	Matsui 628
Craig 689 681 632 608	618 610	Matsushita, Also see Panasonic 626
Criterion 632	Goldstar, Also see Daewoo/Funai/	MEI 668
Curtis Mathes 673 664 645 628 626	622 614 610 607	Memorex 681 642 631 630 621
622 614 610 607	Magnasonic/Nikko 695 642	608 601
Daewoo, Also see Funai/Goldstar/	610 608 607	MGA, Also see Mitsubishi 613
Magnasonic/Nikko 677 675	Hitachi 683 672 668 664 630 628	MGN, Also see Magnin 610
623 622 614	Homelino 608	Midland 657
Dayton 677 623	JC Penney 655 632 630 626	Minolta 630
Denon 630 613	610 608	
	Jensen 646 644 603	

### VCR CODES CONTINUED (SC-320, SC-330, SC-331, SC-340)

Mitsubishi, Also see MGA 683 681	Quasar, Also see Technics 696 664	Symphonic 681 673 657 644 603
670 635 613 608	626 608	628 625 604
Montgomery Ward 683 681 631 628	Radio Shack, Also see Optimus/	Tatung 661 644 603
614 610 608 606 604	Realistic 625 608	Teac 628
MTC 632 628	RCA, Also see Proscan 680 678 675	Technics, Also see Panasonic
Multitech 628	672 664 661 660 658 654	696 687 626
NEC 673 668 661 645 644 603	630 626 613 610 609	Toshiba 660 628 626 608
642 628 608 607	Also see Optimus/	Thomas 628
Optimus, Also see Radio Shack/	Radio Shack 683 681 651	TKK 622
Realistic 695 631 609 608	631 628 626 610 608 604	Toshiba 684 650 681 677 666 637
Orion 694 693 692 685 683 674	Samsung 695 664 658 657 628 610	615 614 613 600
669 661 659 656 648 628	Sansul 674 661 632	Television 626 608
617 614 613 608 606	Sanyo, Also see Fisher/Sears	Ultra 623
Panasonic, Also see Matsushita	681 654 651 615	Unitec 658 657
702 696 681 680 664 658	Scott 659 656 647 617 614 608	Vector Research 673
656 632 626 614 613 608	Sears, Also see Fisher/Sanyo 681 676	Video Concepts 673
Pentax 673 630	673 661 654 651 630 628	White Westinghouse, Also see
Philips 634 626-614 606	626 615 614 608	Emerson/Symphonic 628
Pioneer 679 634 609	Sharp 693 660 645 631 604	XR 1000 632 628
Portland 623	Shionon 632	Yamaha 673 644 603 613
Pro Max 695	Signature 2000 632	Zenith 684 703 642 641 628 624
Proscan, Also see RCA 680 678 664	Singer 632	611 608
632	Sony 683 681 668 666 652 644	
Pulsar 695 677 657 652 628	603 629 620 616	
626 610	Sylvania 656 634 628 626 606	

### CABLE CODES (SC-330, SC-331, SC-340)

ABC 231 229 224 221 218 217	JVC 203	Samsung 217 215
210 206 204	Magnavox 229	Scientific Atlanta 251 247 241 231
Archer 235 230 221	Memorex 245 224 221 218 212	213 207
Belcor 235	Micro Com 248	Sears 228
BFX 228	Millenium3 252	Signal 215
Cableview 227	Monarch 215	Signature 2000 229
Century 252	Montgomery Ward 229	Sprucer 222 207
Century 254 221	Movie Time 221 220 215 206	Starcom 245 243 233 241 229
Citizen 230 221 215	Northcoast 222	219 210
Contec 231 226 224 216 213 208	Novovision 251	Stargate 241 215
207 205 201	NSC 221 220 206 205 200	Sylvania 239 228
Diamond 226	Oak 226 224 205	Teletext 240
Eagle 218	Panasonic 223 212 207 201	Teletv 215
Eastern 202	Paragon 221 218 212	Tezcan 239 236
GE Electronics 234 230 221 215 211	Phillips 244 233 232 221 218	Tecom 256 220 207 206 205 204
Gemini 246 227 225	Pioneer 223 217	Unika 221
General Instruments 229 216	Prolude 253	Universal 243 242 235 234 230 221
214 249	Pulsar 230 215	U.S. Electronics 231 229 210
Hamlin 226 209	Radio Shack 235 230 221	Viewstar 238 237 232 218
Hitachi 229 228	Reclon 226	Warner 217
Jasco 230	Regal 226	Zenith 222 212
Jerrold 229 218 216 214 208 203	Rembrand 205	

### CD CODES (SC-340)

Acurus 833	Lloyds 853	Radio Shack, Also see Optimus/
Adcom 862	Luzman 925 881 873 872 871	Realistic 920 902 893
ADS 909 860	870 863	886 884
Alwa 804 914 909 889 874	Magnavox 928 897 882 828	RCA 910 882 823
864 841	Marantz 897 861 828 819	Realistic, Also see Optimus/
Alkal 931 876 855 818	Mcintosh 812	Radio Shack 921 904 893
Arcam 897	Moridan 897	834 831 821
Audio Research 897	Mission 897	924 897 834 828 808
BSR 845 825	Mitsubishi 855	Samsung 899 857
California Audio Labs 883 833	NAD 922 858 826	Sansul 916 868 863 851
Carver 932 921 911 906 828	Naim 897	Sanyo 921
Craig 888	Nakamichi 915 898 875	Scott 900 882
Crown 879	NEC 862	Sears, Also see LXI 885
Curtis Mathes 883	NSM 856	Sharp 927 891
DBX 820	Onkyo 899 839 837 836 817	Sherwood 920 902 886 884 838
Denon 939 928 894	809 800	824 802
Emerson 917 904	Optimus, Also see Radio Shack/	Shure 844
Enlightened Audio 864	Realistic 940 927 893 882	Sony 852 815 941 930 926
Fisher 921 910 849 848	867 859 830 822 804	918 889 854 848 816
Garrard 827	Ovation 810	807 801 936
Harman Kardon 846 859 855	Panasonic, Also see Technics	Symphonic 882
Hitachi 892 847 835	891 883 869 807	Teac 940 920 909 905 896 878
JVC 923 913 903 829 813	Parasound 834	865 842 834 826 808
Kenwood 806 899 886 866 805	Phillips 897 895	Technics, Also see Panasonic 807
Koss 890 800	Pioneer 907 891 867 865 864 854	891 883 878
Krell 897	Proced 843 840	Toshiba 887 880
Kyocera 877	Proscan 910	Yamaha 929 924 919 908 811 803
Librarian 814	Quasar 883	