

CROSSOVER CONTROLS

While in one component mode, your Jensen allows you to use features of other components. The following chart lists which functions cross over to other components.

Selected Component	Crossover Component	Crossover Functions
VCR or CABLE	TV	Volume +/-, MUTE
TV or CABLE	VCR	VCR Keys: (▶, ◀, ▶▶, ◀◀, ●, ●) • Play, Rewind, Fast Forward, Stop, Record, Pause

SLEEP TIMER

Your Jensen is equipped and programmed with a Sleep Timer function, separate from your TV or for a TV not equipped with Sleep Timer. This feature will program your remote control to turn off your TV up to 99 minutes from now.

1. Hold the "TV" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Press the "Power" key.
3. Press numerical keys 01-99 for the desired amount of minutes. (Example: 01 = 1 minute; 99 = 99 minutes) When the programmed number of minutes has elapsed, the Jensen will turn off your TV.
4. Your Jensen must be pointed at your TV for the Sleep Timer to work properly.

To cancel Sleep Timer:

1. Repeat steps 1-3 from above.
2. Enter the number "00" with the numerical keys to cancel Sleep Timer.

Note: Your Jensen can be used to control all functions and devices once the Sleep Timer has been programmed.

TROUBLE SHOOTING

Problem
No power in remote control (no light).

Solution
Check battery installation and battery freshness.

Problem
The green light did not flash after the code was entered.

Solution
Enter the code within 30 seconds after you release the device key ("TV", "VCR", "Cable", "CD"). Try the code again.

Problem
Code enters into remote, but the component doesn't respond.

Solution
Try the next code on the list. One of the codes should work your component.

Problem
None of the codes work the component.

Solution
After trying all of the codes, try Code Scan or Auto Code Scan.

HELPFUL HINTS

- Enter only one 3-digit code at a time.
- The first code listed isn't always the one for your component.
- If none of the codes on the list work, try Code Scan or Auto Code Scan.
- Enter the code within 30 seconds after releasing the device key ("TV", "VCR", "Cable", "CD").
- If you remove the batteries for any reason, you have 25 minutes in which to replace them without having to re-enter your device codes.

WARRANTY

30 DAY SATISFACTION GUARANTEE

Recoton Corporation (the Company) warrants to the original retail purchaser of this product, that should you be dissatisfied with this Wireless product for any reason during the first thirty days, we will refund your money. Call 1-800-RECOTON to obtain information regarding the procedure for receiving a refund.

ONE YEAR LIMITED WARRANTY

Recoton Corporation (the Company) warrants to the original retail purchaser of this product that should the product or any part thereof be proven defective in material or workmanship within One Year from the date of original purchase, such defects will be replaced without charge for parts or labor. This warranty does not apply to any incidental or consequential damages.


To obtain replacement within the terms of this warranty, the product should be delivered, transportation prepaid, to the Dealer where purchased or to the Company, along with proof of date of purchase. Call 1-800-RECOTON to obtain information regarding the procedure for proper return of your product, if your Dealer does not honor the warranty.

THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT OR PART THEREOF WHICH HAS BEEN DAMAGED THROUGH ALTERATION, MISHANDLING, MISUSE, NEGLIGENCE OR ACCIDENT. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND NO PERSONS OR REPRESENTATIVE IS AUTHORIZED TO ASSUME FOR THE COMPANY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGE SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

NON-WARRANTY SERVICE

If non-warranty service is required, the product may be sent to the Company for repair/replacement, transportation prepaid, by calling 1-800-RECOTON for details, complete instructions, and service fee charges.

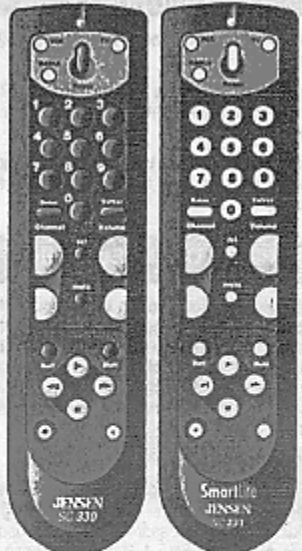

JENSEN

USER GUIDE SC330 SC331 SC340

Customer InfoLine:

TOLL FREE 1-800-962-3986

www.solecontrol.com

KEEP FOR FUTURE USE

Part No. 2426-330J

JENSEN

A Division of Recoton Corp.
2950 Lake Emma Road
Lake Mary, FL 32746
© 1997 Recoton Corp. All rights reserved.
All specifications subject to change without notice.

INTRODUCTION

Important note for new owners.

Thank you for purchasing a Jensen remote control. Right now, your remote will not work any device. You will need to install the batteries and then program the remote control.

Installing the Batteries:

1. On the back of the Jensen remote control, push the lever up and pull off the battery cover.
2. Install 2 "AAA" batteries, making sure the + and - marks match the diagram inside.
3. Replace the battery cover.
4. Test batteries by holding down a device key ("TV", "VCR", "CABLE", "CD") until the green indicator light comes on above the "Power" key. The green indicator should come on after approximately 3 seconds.

NOTE: If you remove the batteries for any reason, you have 25 minutes in which to replace them. If you wait longer than 25 minutes, the codes which you have programmed in the remote control may need to be reprogrammed.

Programming the Remote Control:

To program the remote, you will need to locate the 3-digit code numbers for your device and brand in the Code Listing. There probably is more than one code listed because manufacturers make more than one model of remote control. However, one of the codes should work your component.

It is important to know that the first code listed isn't necessarily the one that works your component. You may need to try more than one code. Enter the codes into the remote until the correct one is installed, following the instructions for TV, VCR, Cable or CD Set-up.

The Jensen will now replace your original remote controls.

TV, VCR OR CABLE SET-UP

1. Manually, turn on the device that you want to set up (TV, VCR or Cable). In the listing, find the 3-digit code numbers to device brand.
2. Hold the device key ("TV", "VCR", "Cable") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key. Within 30 seconds enter in the 3-digit code number. The light will flutter when a successful code is entered.
4. Test the code by pressing the "Power" key. The device turns off, you have chosen the correct code. If it does not, return to Step 2 and use the next 3-digit code on the list.

* If the code does not work all component functions, try the next code on the list.

NOTE: If none of the codes turn off your device, try Code Scan or Auto Code Scan.

CD SET-UP (SC-340 ONLY)

1. Turn on your CD player and insert a CD. In the code listing, find the 3-digit code number for your CD brand.
2. Hold the "CD" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the "CD" key. Within 30 seconds enter in the 3-digit code number. The light will flutter when a successful code is entered.
4. Test the code by pressing the "▶▶" key. The CD plays, you have chosen the correct code. If it does not, return to Step 2 and use the next 3-digit code on the list.

* If the code does not work all component functions, try the next code on the list.

Note: If none of the codes work your CD player, try Code Scan or Auto Code Scan.

USING THE JENSEN

After you have programmed the remote control to operate multiple components, follow these steps to operate the Jensen:

1. Press the key of the component that you want to control ("TV", "VCR", "Cable" or "CD").
2. Press the "Power" key to turn on the component if it is not already "on".
3. Press the key of the function you want to perform. (See Key Function Diagram for details.)