



Universal Remote Instruction Manual




 
 

 







Universal Remote Instruction Manual



 Jasco Products Company
311 N.W. 122nd
Oklahoma City, OK 73114

Made in China

Direct Code Entry





1. Press and hold the **SETUP** button until the red indicator stays on, then release the **SETUP** button. 
2. Press and release the desired device button (**TV**, **VCR**, etc.). The red indicator blinks, then stays lit. 
3. Enter the 3 digit code from the code tables (on separate sheet). Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
  
  
  
4. With your device on, press **ON/OFF**. If the device turns off, no further programming is required. Note: If some buttons do not operate your equipment, try one of the other codes for your brand. 

Write your codes down here for easy reference later.

Device	Device stored	Code
TV	TV	
CBL/SAT		
DVD/VCR		

Code Search

If your device does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following these steps.

1. Manually turn on the device (**TV**, **VCR**, etc.) to be controlled.
2. Press and hold the **SETUP** button until the red indicator stays on, then release the **SETUP** button. 
3. Press and quickly release the desired device button (**TV**, **VCR**, etc.). The red indicator blinks off once. 
4. Press the **ON-OFF** button repeatedly (up to 300 times) until the device to be controlled turns off. The red indicator blinks off with each button press. 
5. Press and release **ENTER** to install the code. 

Most users will store VCR codes under the **VCR** button, Cable codes under **CABLE**, etc. If (for example) you want to store a VCR code under **CABLE**, first follow the procedure for Direct Code Entry (previous page) and press **CABLE** in step 2 of Direct Code Entry, then enter ANY VCR code in step 3 of Direct Code Entry. Then follow the steps above for Code Search.

Note: Code Search starts from the currently stored three digit number under that mode. Sometimes the first code that "works" with your device may only allow limited functionality (e.g. the MENU button might not work). There may be a code that performs more functions. Continue the code search process until the best code is found.

Using Your Remote

 
Code Identification

The Code Identification Feature allows you to identify the three digit library code stored under your device button. For example, if you want to find out what three digit code is stored under your TV device button, follow the six steps below:

1. Press and hold the **SETUP** button until the red indicator stays on. Release the **SETUP** button.




2. Press and release the desired device button (**TV**, **VCR**, etc.). The red indicator blinks, then stays lit.



3. Press and release the **SETUP** button. The red indicator blinks once and remains lit.



 4. To find the first digit for the code stored under the device button pressed in step 2, press each numeric button from **0-9** in turn. The number that causes the indicator light to blink is the first digit in your code.

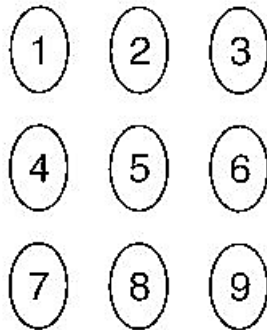

5. To find the second digit, repeat step 4.

6. Repeat step 4 again to find the third digit. This time the red indicator turns off and stays off.

Using Your Remote, cont.

Using SHIFT for Menu and Navigation

The **SHIFT** button allows access to more than one function for certain buttons.

Use the **SHIFT/SETUP** button prior to accessing the **MENU**, **OK**, **EXIT** and Navigation functions e.g.:

For **MENU**, press and release **SHIFT/SETUP** then **MENU/INFO**.



For **OK**, press and release **SHIFT/SETUP** then **OK/MUTE**.



For **EXIT**, press and release **SHIFT/SETUP** then **EXIT/SLEEP**.



For Up, Down, Left or Right Navigation, press and release **SHIFT/SETUP** followed by the respective Channel or Volume button.

