

PHILIPS MAGNAVOX

PM525S

Universal Learning Remote

Learning - Learns the functions of your original remote

DVD - Advanced DVD functions including subtitle, repeat and chapter scan

Satellite - Advanced satellite function keys

Picture-in-picture - Advanced PIP with toggle

CONTROLS

5

DEVICES



TV



VCR



DVD



CABLE



DIGITAL SATELLITE



works with:
Philips
GE Zenith
Sanyo Orion
Magnavox
RCA Sony

**Works
with Over
300
Major
Brands**

Requires 2 AAA Batteries (Not Included)

The only identifying mark on this remote is in the battery compartment, where there is a sticker that says: HE016



Table of Contents

Introduction	3
Setup	4
Battery Installation	4
Battery Saver	4
Code Saver	4
Power-On default	5
TV Punch Through	5
VCR Punch Through	5
Code Setup	5
Button Functions	6
Advanced DVD and SAT Button Functions	8
TV/VCR Punch-Through	9
TV/VCR and TV/DVD Combo units	9
Code Entry	10
Direct Code Entry	10
Code Search	11
Code Identification	12
Sleep Timer	13
Code Learning	13
Tips on Learning	14
Learning Commands	14
Clearing Learned commands for a mode	15
Master Clear	15
Code List	16
Product Operation	21
Troubleshooting	22

Introduction

Congratulations on your purchase of Philips Magnavox Universal Remote Control. Philips Magnavox Universal Remotes let you replace a broken or lost remote or combine more than one remote into one. In addition, this remote is equipped with a command learning feature which lets the remote learn commands from your original equipment remote control!


This remote control operates the common features of most but not all models and brands of IR Infrared Controlled Video Equipment. This remote may provide functions that are not available on your equipment. Some functions of your particular equipment (e.g. menu functions) may not be controlled by this remote. In such cases, use the original remote control for your equipment. Please use this manual to become familiar with your Philips Magnavox Universal Remote. After you are familiar with your remote the first thing you need to do is to install batteries and setup your remote for your particular product and brand.

Thank you for buying a Philips Magnavox remote and we hope it will give you many years of service.

Setup

Battery Installation

1. On the back of the remote, push down on the tab and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert 2 AAA Alkaline batteries.
3. Press the battery cover back into place.

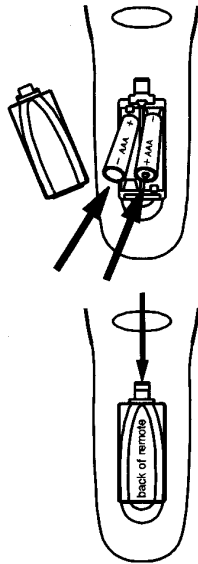

Battery Saver

Your remote automatically times out if the buttons are depressed more than 30 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

Code Saver

Codes are stored in permanent memory while you are changing batteries so you will not lose any codes stored in the remote while you are changing batteries. If you do want to delete any stored codes, see page 15.

Power-On Default

The remote powers on in TV mode.

TV Volume/Mute Punch-Through

The TV Volume/Mute punch-through feature lets you control the Volume and Mute function of your TV in any mode programmed to be a VCR, DVD, Cable or SAT device, without needing to change to TV mode.


VCR Punch-Through

Punch-through to VCR mode is only allowed in TV, VCR and Cable modes. SAT/DBS is dedicated for satellite mode.

Code Setup

The Code Search button is used to setup the remote. You can either setup the remote using the code for your brand of product, from the code tables, or you can search through the library of codes until you find a code that works for your product.

NOTE: You can store any kind of code under any mode (except TV). I.E. you can store a VCR code under the CBL key, or a DVD code under the VCR key, etc. However, you can only store TV codes under the TV key.

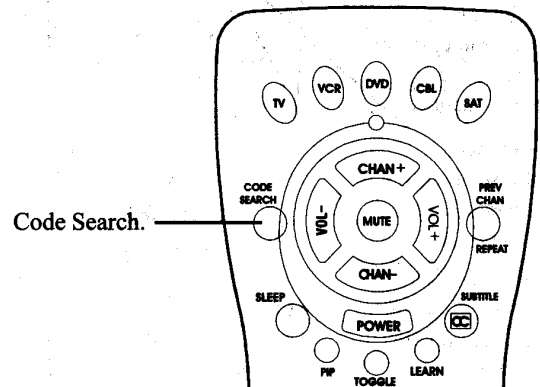

Button Functions

Some buttons on the remote might have functions that are referred to by different names on the device you are controlling. E.G. Prev. Ch. may be called RECALL, or ENTER may be called DISPLAY. These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your product. E.G., your product must be equipped with Prev. Ch. ability for the Prev. Ch. button to operate this feature.

MUTE Turns off the TV sound while the picture remains.

TV, VCR, DVD CBL, SAT Selects product to be operated.

Indicator light Lights when any button is pressed.

Code Search For setup.

POWER Turns product On or Off.

SLEEP Turns off the TV after a period of 1 to 99 minutes.

PIP TV Picture-in-Picture control.

NUMBERS

Enter numbers for direct channel selection. Some products require Enter to be pressed after channel selection.

ENTER

Used after direct channel number entry to immediately change to the selected channel.

INFO/Select displays/selects on-screen channel information, etc.

MENU Access the Menu functions of the device you are controlling.

OK Selects menu items for the device you are controlling.

Note: The REC button must be pressed TWICE to record from your VCR. For some brands of VCRs, you might need to press the REC button once, then press it again for three seconds.

Button Functions, cont.

CHANNEL Up/Down Changes the channels.

VOLUME Up/Down Changes the volume level of the product, normally the TV.

Prev. Ch. Returns to the previously selected channel, or DVD repeat toggle.

CC (Subtitle) TV Closed Caption (if your TV has this feature) or DVD Subtitle toggle.

Learn Used to setup learning functions.

TOGGLE Swaps TV PIP screens.


TV/VCR/input toggle For some TVs, press repeatedly to select from available viewing sources (antenna, cable box, VCR, etc.).

GUIDE displays on-screen program guide.

QUIT Used to exit menu functions.

CHAPTER +/- controls DVD track selection i.e. DVD Track Skip Up/Down (in DVD and SAT modes). Note the VCR Transport keys also control DVD when in DVD Mode.

RECORD, PLAY, STOP, REW, FF, PAUSE VCR control buttons operate your VCR even when the remote is set to operate the TV. Also operates DVD Scan +/-.

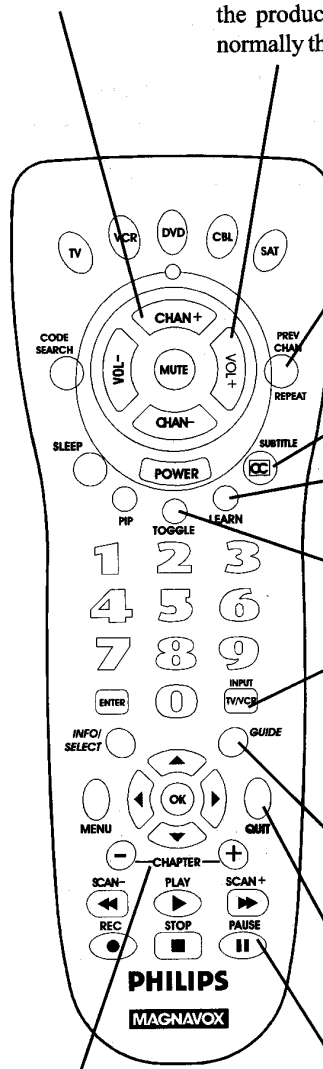

Advanced Button Functions

DVD

Scan+ and **Scan-** buttons control the speed of Fast Forward and Reverse Playback respectively.

Chapter+ and **Chapter-** buttons respectively locate the succeeding or preceding Chapters or Tracks on a disc.

Subtitle button brings up DVD Subtitle Menu for Subtitle selection and display.

Repeat button performs DVD players "A-B Repeat" (or RPT A.B) function for repeat play of current Chapter or Track.

Info/Select button brings up DVD Display or Control Menu for Chapter/Track/Title number, Time remaining/elapsed indication, system information, etc.

Menu brings up the DVD disc Menu screen - use with the Up, Down, Left & Right navigation buttons.

OK button is used for on-screen Menu selection. Note some DVD players require the Play button to be used.

Quit button is used to Exit or Clear on-screen Menu displays.

Play button is used to start Disc playback and for Menu selection on some DVD players.

Stop button stops Disc playback.

Pause button will pause Disc playback - press Play to resume.

Note - in DVD Mode the INPUT button activates the DVD Players SETUP Menu.

SAT

Guide button displays on-screen Satellite Channel Guide.

Chapter+ and **Chapter-** buttons perform the "Page+" and "Page-" function for on-screen Guide Menus used by some Satellite systems.

Info/Select button brings up Satellite Display screen for current Channel and system information.

Menu brings up the Satellite Menu screen - use with the Up, Down, Left & Right navigation buttons.

OK button is used for on-screen Menu selection.

Quit button is used to Exit or Clear on-screen Menu displays.

Input button performs the Satellite TV/SAT function.

TV/VCR Punch-Through

VCR Punch-through is automatically available in TV and Cable Modes only i.e. the 6 VCR keys (Play, Pause, Stop, Record, FF and Rewind) will punch-through to the device programmed under VCR when in either TV or Cable Modes.

The TV/VCR/INPUT button performs the TV/VCR antenna switch function when in VCR Mode.

The TV/VCR/INPUT button performs the A.B switch function when in Cable Mode.

The TV/VCR/INPUT button performs the TV/SAT switch function when in SAT Mode.

The TV/VCR/INPUT button performs the INPUT source switch function when in TV Mode.

The TV/VCR/INPUT button performs the DVD Setup function when in DVD Mode.

Misc.

SELECT means same as OKAY - some manufacturers use OKAY label and others use SELECT label on their remotes.

CC will activate the Closed Caption feature if your device has that feature.

PIP (Picture-in-Picture) and **TOGGLE** buttons operate your television's Picture-in-Picture features. Use PIP to activate the feature and TOGGLE to swap between the displayed pictures on your TV.

TV/VCR and TV/DVD Combo units

Note that for some TV/VCR and TV/DVD combo units you might need to set up two different buttons to control both parts of the combo unit. E.G., (referring to the Direct Code Entry section on the following page) you might need to set up a code under the TV button to control the TV part of the combo unit AND a separate code for the VCR or DVD under any other button you choose.


Code Entry

Direct Code Entry

1. Press and hold the Code Search button until the red indicator stays on. Release the Code Search button.
2. Press and release the desired mode button (TV, VCR, etc.).

The red indicator blinks, then stays lit.

3. Enter the 3 digit code from the code tables. Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
4. With your device on, press CHANNEL Up. If the device responds, no further programming is required. Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

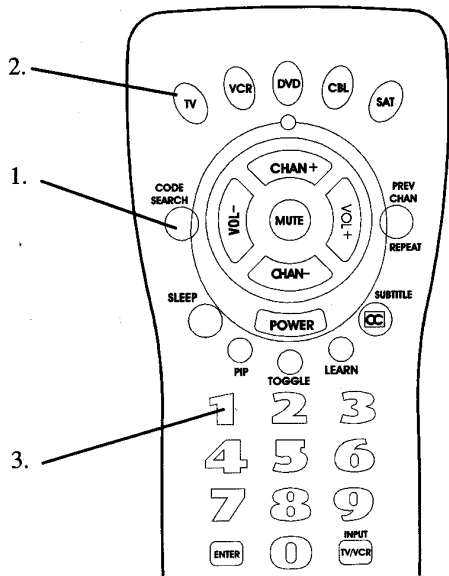

Write your codes down here for easy reference later.


Type	Type stored	Code
TV	TV	
VCR	VCR	
Cable	CBL	
SAT	AUDIO	
DVD	DVD	

Programming with Code Search

1. Manually turn on the device (TV, VCR, etc.) to be controlled.
2. Press and hold Code Search button until the red indicator stays on. Release the Code Search button.
3. Press and release the desired mode button (TV, VCR, etc.).
The red indicator blinks, then stays lit.
4. Press the Channel Up button repeatedly (up to 300 times) until the device to be controlled changes channel. The red indicator blinks, then stays lit. If you accidentally overshoot the code required, press the Channel Down button to backtrack through the library until the device changes channel. Pressing Channel Up changes direction to forward again. Press and release the Mute button to install the code.

The above assumes that you want to store VCR codes under the VCR button, Cable codes under CBL, etc. If you want to store a VCR code under CBL, etc., first follow the procedure on page 10 and try ANY CBL code from the code tables, e.g. press CBL in step 2, page 10, and then enter ANY VCR code. Then follow the steps above.


Note: If the device does not have a Channel Up button, use Play (VCR only) or Power instead. Code Search starts from the currently stored three digit number under that mode e.g. if the mode has 100 codes and the currently stored code is 050 then the Code Search starts from 051 continuing to 100 before looping back to 000 and finishing at 050. This simplifies the process if you find that several preprogrammed codes operate your device by allowing you to bypass codes already tried.

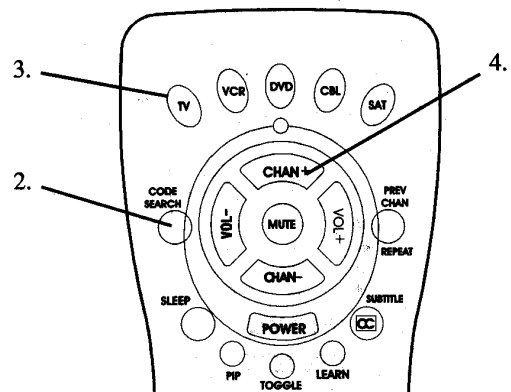

Code Identification

Code Identification

1. Press and hold Code Search button until the red indicator stays on. Release the Code Search button.
2. Press and release the desired mode button (TV, VCR, etc.).
The red indicator blinks, then stays lit.
3. Press and release the Code Search button. The indicator light blinks off.
4. To find the first digit for the code stored under the mode key pressed in step 2, press each numeric key from 0-9 in turn. When the indicator light blinks off the number you pressed is the first digit for the code you are searching for.
5. To find the second digit, repeat step 4, this time when the indicator light blinks off this is the second digit.
6. Repeat step 4 again to find the third digit.

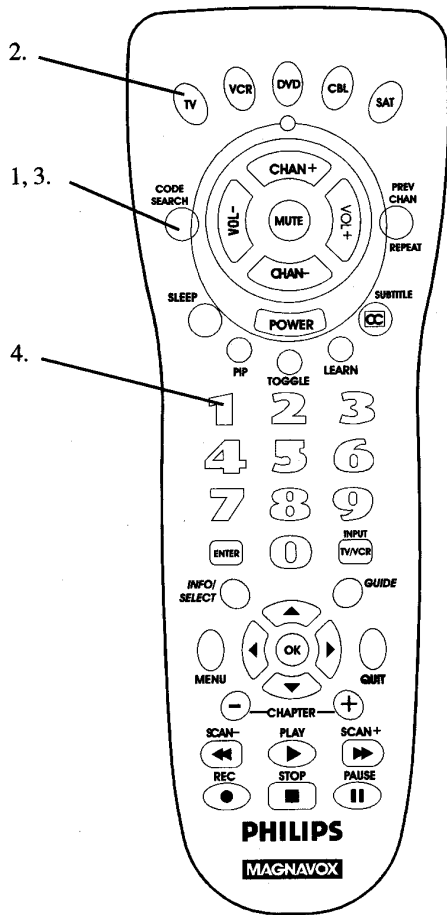

Sleep Timer

The Sleep feature enables the remote to turn off the TV after a period of 1 to 99 minutes. Remote is to be in TV mode to set a Sleep Timer. This feature works even if your TV does not have this feature.

1. Press and release the TV Mode key.
2. Press and hold the Sleep button until LED remains on (occurring after approx. 2-3 seconds).
3. Release Sleep button.
4. Press and release the numeric keys (01-99) for the time required. The LED will blink off to indicate keypress acceptance and remain off after second keypress.
5. TV Sleep Timer now set.
6. **Leave the Remote pointing towards the TV with an unobstructed path.**

To cancel the Sleep Timer, press and hold the Sleep key until the LED blinks or press and release the Power key in TV Mode.

Code Learning

Tips On Learning


1. Use fresh batteries for both the Learning Remote and the Original Remote.
2. Perform a Master clear (see page 15) before learning.
3. Place the original remote end-to-end with the Learning Remote so the IR transmitters on both remotes are directly in line with each other. Keep the two remotes approximately one inch away from each other.
4. Experiment by learning 2 or 3 commands initially (to ensure compatibility and familiarity) and then carry out a Master Clear before completely learning your original remote's commands.
5. Do not try to learn directly under an incandescent or low-energy light as these can cause interference with learning. Keep at least three feet away from any such light sources.

Code Learning, cont.


Learning Commands

1. Press and hold the Code Search button until the red indicator stays on. Release the Code Search button.
2. Press the mode button for the type of device you want to learn (TV, VCR, Cable, etc.). The indicator lights blinks off once.
3. Press the Learn button.
4. Press the button on the Learning Remote that you want to teach, e.g. Power.
5. Point both remotes at each other (see tips on page 11). Press and hold the Original Remote button that you want to learn, e.g. Power, until the indicator light turns off. If there is a problem with learning, the indicator light blinks for three seconds but the remote remains in the Learning mode. If this happens, repeat from Step 4.
6. Repeat Steps 4 and 5 for other buttons you want to learn.
7. Press and release the Code Search button when all desired original remote commands are learned. Code Learning is now complete.

Note :- No functions may be stored under the Code Search button, any mode button, or the Learn button.

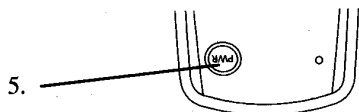

Approx. 1 inch apart

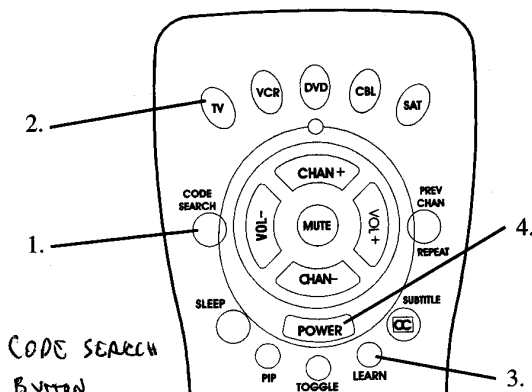

CODE SEARCH
BUTTON
LEARN
FUNCTION
FUNCTION HOLD


14

Code Learning, cont.

To Clear all Learned Commands under a mode

1. Press and hold the Code Search button until the indicator light turns on. Release the Code Search button.
2. Press and release the button for the mode you want to clear (TV, VCR, etc.). The indicator blinks off.
3. Press and release the Learn button TWICE. The indicator blinks off.
4. Press and release Code Search. The indicator blinks off.


All learned Commands under that mode are now cleared.

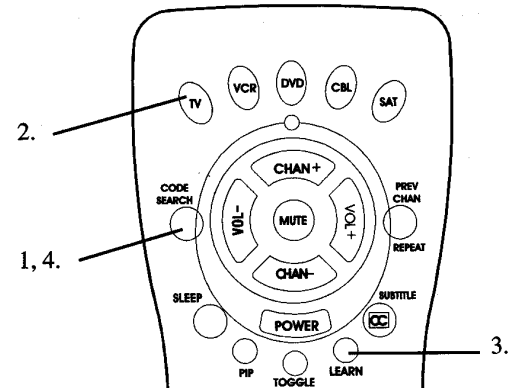

Master Clear - To Clear all Learned Commands, i.e. return to factory defaults

1. Press and hold the Code Search button until the indicator light turns on. Release the Code Search button.
2. Press and release the Learn button TWICE. The indicator blinks off.
3. Press and release Code Search. The indicator blinks off.

All Learned commands in the remote are now cleared.

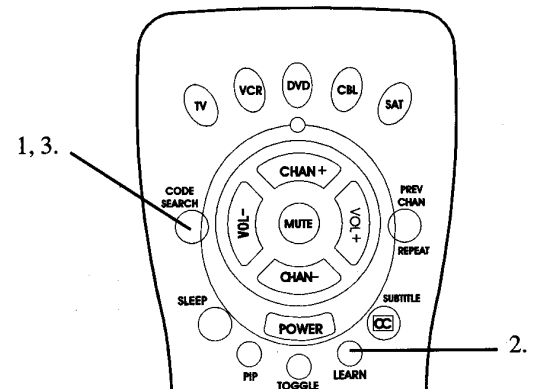

15

Code List

TV

ABEX.....	120
ADMIRAL.....	701 918
ADVENTURA.....	019
AIKO.....	407
ALLERON.....	206
AMARK.....	603
AMTRON.....	906
AKAI.....	801
AMSTRAD.....	520
ANAM NATIONAL.....	104 805
.....	901 906 920
AOC.....	002 003 102 119
.....	217 302 502 814
ARCHER.....	603
AUDIOVOX.....	906
BANG & OLUFSEN.....	620
BELCOR.....	002
BELL & HOWELL.....	506
.....	601 701
BRADFORD.....	906
BROKSONIC.....	215 316
BROKWOOD.....	002
CANDLE.....	002 019 402 502
CAPEHART.....	119
CELEBRITY.....	801
CENTURION.....	502
CETRONIC.....	805
CITIZEN.....	002 112 402 407
.....	502 512 701 805 906 319
CLAIRTONE.....	003
CLASSIC.....	805
CLP.....	016
CLP CLASSIC.....	013 012 001
COLORTYME.....	002 502 602
CONCERTO.....	002 502
CONCIERGE.....	713
CONTEC/CONY.....	003 802
.....	805 902 906
CRAIG.....	805 906
CROWN.....	805 906
CURTIS MATHES.....	002
.....	103 112 502 506
.....	512 601 701 704
CXC.....	805 906
DAEWOO.....	002 102 110 214
.....	303 311 314 403 407
.....	502 503 611 805 809 909
DAYTRON.....	002 502
DIMENSIA.....	601 704
DUMONT.....	002 713
DYNASTY.....	805
ELEKTRA.....	701
ELECTROBAND.....	003 801
ELECTROHOME.....	002 502
.....	803 901 914
EMERSON.....	002 003 004 005
.....	104 105 106 115 204
.....	205 206 213 304 305
.....	316 319 405 502 505
.....	506 519 604 605 705
.....	804 805 903 904 905 906
ENVISION.....	002 502
FISHER.....	506 606 619 902
FUJITSU.....	206
FUNAI.....	206 805 906
FUTURETEC.....	805 906
GE.....	002 006 007 018 107
.....	114 310 312 502 601 704
.....	719 803 806 810 901 911
GIBRALTER.....	002 713
GOLDSTAR.....	002 102 117 207
.....	217 307 502 818 914
GRUNDY.....	206 906
HALLMARK.....	002 502
HARVARD.....	906
HITACHI.....	002 016 116 216
.....	315 502 507 515
.....	519 607 615 701
.....	707 715 815 902 915
IMA.....	906
INFINITY.....	807
INTEQ.....	713
JANEIL.....	019
JBL.....	807
JCB.....	801
JC PENNY.....	002 007 102
.....	107 112 310 312
.....	402 502 512 601 704
.....	719 803 806 818 907
JENSEN.....	002 502
JVC.....	007 107 108
.....	308 510 607 902
KAWASHO.....	002 502 801
KAYPANI.....	119
KEC.....	805
KENWOOD.....	002 502 914
KLOSS NOVABEAM.....	019
.....	408 508
KONKA.....	203 208 219
.....	306 317 417
KTV.....	003 213 319
.....	608 703 805 906
LODGENET.....	601 701
LOEWE.....	807
LOGIK.....	601 701
LUXMAN.....	002 502
LXI.....	002 312 502 506
.....	512 601 704 719 807
MAGNAVOX.....	002 009 109
.....	118 209 309 402 408
.....	502 508 510 807 914 917
MAJESTIC.....	601 701
MARANTZ.....	002 502 807
MATSUI.....	807
MEGATRON.....	002 502 507
MEI.....	003
MEMOREX.....	002 115 206 502
.....	506 601 701 706
MGA.....	002 102 206
.....	502 619 803 914
MIDLAND.....	007 107 312
.....	713 719 818
MINUTZ.....	806
MITSUBISHI.....	002 102
.....	206 502 510 619
.....	709 803 814 914
MONTGOMERY WARD.....	601
.....	701
MOTOROLA.....	901 918

MTC.....	002 003 102
.....	112 502 512
MULTITECH.....	906
MULTIVISION.....	910
NAD.....	002 120 502 512
NEC.....	002 102 110 111
.....	502 510 602 901
NIKEI.....	805
NIKKO.....	002 407 502
NTC.....	407
ONKING.....	805
ONWA.....	805 906
OPTIMUS.....	120 618
OPTONICA.....	111 918
ORION.....	105 115 713
PANASONIC.....	007 107 516
.....	608 618 718 807 901
PHILCO.....	002 009 102 109
.....	309 402 408 502
.....	508 807 901 914
PHILIPS.....	002 009 109 202
.....	209 210 310 402 408
.....	508 510 807 901 914 917
PILOT.....	002
PIONEER.....	002 120
.....	502 519 610
PORTLAND.....	002 102 407 502
PRECISION.....	218
PRICE CLUB.....	112
PRISM.....	107
PROSCAN.....	312 601 704 719
PROTON.....	002 119
.....	220 502 910
PULSAR.....	713
PULSER.....	002
QUASAR.....	007 107 516 608
.....	618 718 807 901
RADIO SHACK/REALISTIC.....	002 111 117 406
.....	502 506 601 618 704
.....	705 805 818 906 914
RCA.....	002 011 102 211 302
.....	312 318 320 406 409 411
.....	420 502 511 514 519 601
.....	702 711 719 809 811 901
.....	909 911 912 914
RHAPSODY.....	003
RUNCO.....	713
SAMPO.....	002 119 502 818
SAMSUNG.....	002 012 102 103
.....	112 212 502 512 818 914
SAMSUX.....	502
SANSUI.....	115 215
SANYO.....	002 412 506 619 902
SCOTCH.....	002 502
SCOTT.....	002 004 105
.....	206 502 805 906
SEARS.....	002 112 206 312 502
.....	506 512 520 601 612
.....	619 704 719 902 914
SHARP.....	002 013 014 111 502
.....	712 812 813 913 918
SHOGUN.....	002
SIGNATURE.....	601 701 903
SIMPSON.....	402
SONIC.....	003
SONY.....	202 708 801
SOUNDESIGN.....	002 206 402
.....	502 805 906
SPECTRAVISION.....	921
SQUAREVIEW.....	520
SSS.....	002 805 906
STARLITE.....	906
SUPREMACY.....	019
SUPREME.....	801
SYLVANIA.....	002 009 109 209
.....	309 402 408 502
.....	508 717 807 914 917
SYMPHONIC.....	520 904 906
TANDY.....	918
TATUNG.....	901
TECHNICS.....	007 107
TECHWOOD.....	002 007
.....	107 502
TEKNIKA.....	002 019 102 112
.....	206 209 402 407 502 512
.....	601 618 701 805 902 906
TELECAPTION.....	313
TELERENT.....	601 701
TERA.....	002 220
TMK.....	002 502
TOSHIBA.....	112 313 413 506
.....	510 512 613 902
UNIVERSAL.....	310 806
VICTOR.....	607
VIDTECH.....	002 102 502
VIKING.....	019
WARDS.....	002 004 009 102
.....	109 111 206 209 310
.....	408 502 508 513 601
.....	701 704 806 807 914
WHITE WESTINGHOUSE.....	311 611
YAMAHA.....	002 102 502 914
YUPITERU.....	805
ZENITH.....	002 008 115
.....	215 405 407 601
.....	701 713 903 916

VCR

ADMIRAL.....	224
ADVENTURA.....	726
AIKO.....	826
AIWA.....	126 324 528 726
AKAI.....	027 235 335 424
.....	524 624 724 924
ALLEGRO.....	326 534 925
AMERICAN HIGH.....	130 226
ASHA.....	425
AUDIO DYNAMICS.....	025 436
AUDIOVOX.....	525
BELL & HOWELL.....	428
BEAUMARK.....	425
BROKSONIC.....	227 325
.....	530 626 632
CALIX.....	525
CANDLE.....	025 026 425
.....	525 625 725 825
CANNON.....	130 226 535 635
CAPEHART.....	135 534
CARVER.....	330
CCE.....	230 826

CITIZEN025 026 425 525
625 725 825 826
 COLORTYME025
 COLT230
 CRAIG230 425 426 525
 CURTIS-MATHES025
124 130 226 324
425 526 635 725
 CYBERNEX425
 DAEWOO ..026 135 625 626
726 825 826 926
 DAYTRON135
 DBX025 436
 DIMENSIA124
 DYNATECH324 726
 ELECTROHOME027 525
 ELECTROPHONIC525
 EMERSON .027 028 127 128
130 226 227 228 324
325 327 427 428 525
526 527 528 625 626
627 628 630 634 724
726 727 735 827 828 927
 * FISHER025 029 129 328
330 426 428 928
 FUJI130 226 524
 FUNAI324 726 924
 GARRARD726
 GE124 130 136 226
425 429 635 835
 GOLDSTAR025 236 525
 GRADIENTE726
 GO-VIDEO438 537
 HARLEY DAVIDSON726
 HARMAN KARDON 025 930
 HARWOOD230
 HEADQUARTER428
 HITACHI136 235 324 336
538 629 638 829 834
 HI-Q426
 INSTANT REPLAY130
226 924
 INTEQ525
 JCL130 226
 JC PENNEY025 130 235
425 428 436 525
629 635 834 935
 JENSEN235 629
 JVC025 235 326 428 436
 KENWOOD025 235
428 436 725
 KLH230 237
 KODAK130 226 525
 LLOYD324 726
 LOGIK230
 LXI525
 MAGNAVOX130 226 330
534 536 635 734
 MAGNIN425
 MARANTZ 025 130 226 330
428 436 530 535 725
 MARTA525
 MASUSHITA130 226
 MEI130 226
 MEMOREX130 224 226
324 335 425 426
428 525 534 726
 MGA027 630
 MGN TECHNOLOGY425
 MIDLAND429
 MINOLTA629 834
 * MITSUBISHI027 031 131
229 231 328 431 436
531 629 630 730 930
 MONTGOMERY WARD 224
631
 MOTOROLA130 224 226
 MTC324 425 726
 MULTITECH324 425
726 429 230
 NEC025 235 428 526 530
725 731 831 931 436
 NIKKO525
 NOBLEX425
 OLYMPUS130 226
 OPTIMUS035 224 525
537 737 837 937
 OPTONICA537 631
 ORION227
 PANASONIC035 039 130
226 635 636 937 938
 PENTAX136 629 725 834
 PENTEX RESEARCH025
 PHILCO130 226 330 635
 PHILIPS536 631 734 738
 PILOT525
 PIONEER ..132 232 436 629
 PORTLAND026 135 725 825
 PROSCAN124
 PROTEC230
 PULSAR534
 QUARTER428
 QUARTZ428
 QUASAR130 226 635 636
 RCA033 124 130 133
136 226 233 332
424 425 432 532 629
636 732 832 834 932
 RADIOSHACK/REALISTIC ..
027 029 035 124 129
130 224 226 324 335
425 426 428 525 631
635 726 737 837 937
 RADIX525
 RANDEX525
 REPLAY938
 RICOH936
 RUNCO534
 SAMSUNG ..037 335 425 427
429 537 624 625 629
 SANKY224 534
 SANSUI235 333 436
 SANYO328 425 426 428
 SCOTT325 327 433 625
626 630 735 927
 SEARS029 129 130
226 330 426 428
525 629 834 928 935
 SHARP027 224 324 338
631 637 737 825
 SHINTOM230 337
524 629 936
 SHOGUN425

SIGNATURE324
 SINGER130 226 230
 SONY034 038 138
238 524 838 936
 STS130 226 629 834
 SYLVANIA130 324 330
536 630 635 726
 SYMPHONIC225 324 726
 TANDY324 428
 TASHIKO525
 TATUNG235
 TEAC235 324 726
 TECHNICS035 130 226
 TEKNIKA130 134 226
324 525 726
 TiVo738 838
 TOSHIBA029 330 433
625 629 630 735
 TOTEVISION425 525
 TMK425 526 828
 UNITECH425
 VECTOR RESEARCH025
436
625 725
 VICTOR436
 VIDEO CONCEPTS ..025 027
436 625 725
 VIDEOSONIC425
 WARDS027 130 224 226
230 234 324 425 426 525
625 629 631 726 735 834
 WHITE WESTINGHOUSE ...
324 924
 XR-1000130 226 230 726
 YAMAHA ...025 235 428 436
 ZENITH030 036 125 326
436 437 524 525 534
632 824 925 929 936

Cable

ABC048 148 248
348 747 847 947
 ALLEGRO054 154
 AMERICAST354
 ANTRONIX448 548
 ARCHER448 548 648 748
 CABLETENNA448
 CABLEVIEW448
 CENTURY748
 CITIZEN748
 COLOUR VOICE848 948
 COMTRONICS049 149
 CONTEC/CONY249
 EASTERN349
 GARRARD748
 GC ELECTRONICS548
 GEMINI449 549
 GE556
 GENERAL INSTRUMENT ...
053 453 454 552 554
654 752 754 947 952
 HAMLIN649 749 849
 HITACHI947
 HYTEX847
 JASCO748
 JERROLD048 050 148
254 348 449 454 552
554 652 747 752 947
 MAGNAVOX150
 MEMOREX250
 MOVIE TIME350 847
 NSC350 847
 OAK249 550 847
 PACE854
 PANASONIC452 647
 PARAGON250
 PHILIPS150 549 650 748
750 848 850 948
 PIONEER051 451 950
 PULSAR250
 RADIO SHACK152
 RCA352 647
 REALISTIC548
 REGAL849
 REGENCY349
 REMBRANDT947
 RUNCO250
 SAMSUNG049 051
 SCIENTIFIC ATLANTA 248
251 351 451
 SIGNAL049 449
 SIGNATURE947
 SL MARX049
 SPRUCER647
 STANDARD COMPONENTS
551
 STARCOM348 449 747
 STARGATE049 449
 STARSIGHT653
 STAR SIGHT CABLE
 SERVICE352
 STARQUEST449
 STAR TRAK253
 TANDY651
 TELEVIEW049
 TELEWEST854
 TEXSCAN551
 TOCOM048 751 952
 TOSHIBA250
 TUSA449
 TV86350
 UNIKA448 548 748
 UNITED ARTISTS847
 UNITED CABLE747
 UNIVERSAL448 548
648 748 851
 VIDEOWAY052
 VIEWSTAR 149 150 350 651
 VIDEO TECH656
 ZENITH054 154 250
353 354 450 553
653 753 853 951 953

SAT

AMPLICA159
 CHANNEL MASTER359
459 559
 CHAPPARAL657 659 757
 CHEYENNE757
 DRAKE059 360 857

DISH NETWORK366 460
.....	464 560 660 962
DX ANTENNA458 859
ECHOSPHERE464
ECHOSTAR366 460 464
.....	560 660 962
EXPRESSVU464
FUJITSU760 860
GE265 863
GENERAL INSTRUMENTS
.....	058 066 158 166
.....	258 865 960 965
DSS HITACHI765 864
DSS HUGHES SATELLITE
.....	465 564 664 864 964
JANEIL261
JERROLD361
JVC466
KENWOOD461
LUXOR561
DSS MAGNAVOX259
.....	565 862
MACOM STATE661
NORSTAT761 861
DSS PANASONIC260 264
PRIMESTAR364
PHILIPS259 565 862
PHILIPS/MAGNAVOX259
.....	565 862
PIONEER060
PROSCAN265 863
DSS RCA265 866 966
REALISTIC358 961
SAMSUNG061
SCIENTIFIC ATLANTA	362
SHARP062
SIERRA I II III757
DSS SONY160 963
STARCHOICE364
STAR SIGHT964
STAR TRAK462
STS458 558 658 758
SUPER GUIDE562
TOSHIBA858
TOSHIBA DSS	...064 164 764
UNIDEN762 958
DSS UNIDEN964
VIDEO CIPHER II059
ZENITH059 065 165
.....	266 360 857 957

DVD


AIWA043
AKAI141
APEX044
DENON641 743
ELTA045 145
EMERSON241
FISHER243
GE644
GO-VIDEO342 244
HITACHI042 543 545
HARMAN/KARDON344
JVC242 443
INTEGRA843
KENWOOD641 544
KONKA642 742 842 942
MAGNAVOX441 442
MARANTZ441 442
mitsubishi841
MUSTEK744
NAD944
NAKAMICHI844
ONKYO843
ORITRON143
PANASONIC641 741
PHILIPS441 442 943
PIONEER042 545
PROSCAN941
RCA941 644
SAMSUNG342
SAMPO343
SEG444
SHARP341
SHERWOOD144
SHINCO644
SONY541
TEAC042 545
TOSHIBA441 245
ZENITH241 142 345
YAMAHA641 643
YAMAKAWA445

Laser Disc


DENON132
PIONEER132
PROSCAN432
RCA432
SANYO824
SONY933
ZENITH824

Product Operation


After the batteries are installed and you have programmed the remote for the codes that operate your products, you can use your remote to operate a TV, VCR, Cable Box, or Satellite System, etc.

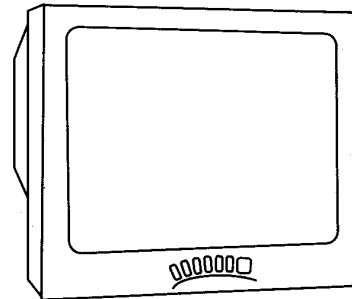


TV (Press TV First)

 


VCR
(Press VCR First)

 


DVD Player
(Press DVD first)

 

Satellite System
(Press SAT first)

 

Cable Box
(Press CBL first)

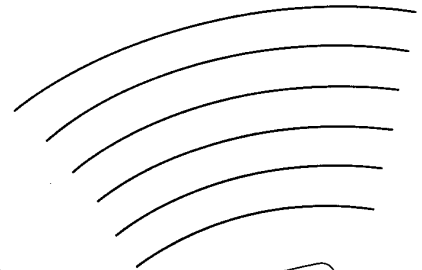

To Operate:

1. Press the TV, VCR, CBL, SAT, etc. button (depending on which product you want to operate).
2. Aim the remote at the product.
3. Press POWER to turn on the product.
4. Press other buttons to operate the features of your product.

