

Philmore[®]

UNIVERSAL
REMOTE CONTROL

PM-RC8

OPERATE:

TV1, HI-FI, VCR, AUX,
LD, CABLE, CD, VCD,
SAT, TV2, DVD, TAPE,
other Audio Products.

**INSTRUCTION
BOOKLET**

Right reserved to
improve specifications
without notify

Introduction	2
Battery Installation	3
Button Functions	4
Programming Your TV	5
Programming Your VCR	6
Programming Your Cable Box	7
Auxiliary Programming	8
Code Search	9
Code Identification	9
TV Codes	10
VCR Codes	11
TV/VCRs Codes	12
Cable Box Codes	12
Satellite Systems	13
Home Control	13
Audio	13
DVD Players	13
Laser Disc	13
CD Players Codes	14
Troubleshooting and Toll-Free Help Line	14
Product Operation	15

Introduction

Congratulations on your purchase of Universal Remote Control.

Universal Remote allows you to replace a broken or lost remote or to combine more than one remote into one.

This remote control operates the common features of most but not all models and brands of IR Infrared Controlled Video Equipment.

This remote may provide functions that are not available on your equipment. For example, menu operations, some function of your particular equipment may not be controlled by this remote in such cases use the original remote control for your equipment.

Please use this manual to become familiar with your Universal Remote.

 
After you are familiar with your remote the first thing you need to do is to add batteries and program your remote to your particular product and brand. See table of contents above.

Thank you for buying a remote and we hope it will give you many years of service.

Battery Installation

Your Universal Remote requires two new AAA alkaline batteries. To install the batteries:

1. On the back of the remote, push down on the tab and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert the batteries.
2. Press the battery cover back into place.

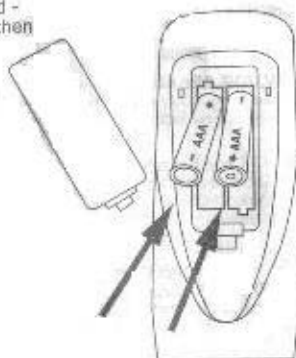

Battery Saver

 
Your remote will automatically "time-out" if the keys are depressed more than two minutes. This will save your batteries should your remote get stuck in a place where the keys remain depressed (e.g., Between the sofa cushions).

Code Saver (Important)

You will have no more than 90 seconds to change the batteries in your remote without losing codes you have programmed. However, **do not** press any buttons until batteries are secured in the remote. If buttons are pressed without batteries in the remote, **all codes will be lost.**

Glow Keys

Must be exposed to bright light before the keys will glow in the dark. The longer the exposure to light the longer the glow. Do not place in Direct Sunlight. Natural day light or light from a Filament lamp or fluorescent lamp is sufficient to recharge the glow material.

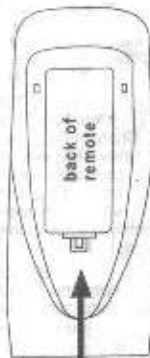

Button Functions

Some buttons on the remote control might have functions that are referred to by different names on your product. For example "Prev. Ch." may be called "RECALL" or "ENTER" may be called "DISPLAY." These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your product. For example, your product must be equipped with "Prev. Ch." ability for the "Prev. Ch." button to operate this feature.

Indicator Light
The indicator lights when any button is pressed.

TV, VCR, CBL/AUX
Selects product to be operated.

Code Search
Used to program the remote or to search through codes.

CHANNEL Up/Down (Arrows)
Change channels.

NUMBERS
Enter numbers for direct channel selection. Some products require "Enter" to be pressed after channel selection.

ENTER
Shows the TV's Channel/Time display. May also be used after direct channel number entry to immediately change to the selected channel.

MENU
Access the Menu functions of the device you are controlling.

SELECT/ADJUST
Used to select and adjust menu items of the device you are controlling.

Note: The REC button must be pressed TWICE to record from your VCR. For brand VCRs, press the REC button once, then press it again for three seconds.



POWER
Turns product On or Off.

VOLUME Left/Right (Arrows)
Changes the volume level of the product, normally the TV.

MUTE
Turns off the TV sound while the picture remains.

Prev Ch
Returns to the previously selected channel.

TV-VCR/Sources
For some TVs, press repeatedly to select from available viewing sources (antenna, cable box, VCR, etc.)

QUIT
Used to exit menu functions.

RECORD, PLAY, STOP, REWIND, FFWD, PAUSE
VCR control buttons operate your VCR even when the remote is set to operate the TV.

Programming Your TV

1. Manually turn on the TV.
2. Press and hold the CODE SEARCH button until the Indicator Light lights, then release the CODE SEARCH button.
3. Press and release the TV button (the Indicator Light will blink and then remain lit).
4. Find the three digit code for your TV in the code list in this booklet and enter it using the Number Buttons.

CODE SEARCH

TV

After your code is entered, the indicator will turn off.



Note: If the LED blinked rapidly when you entered the code you may have entered invalid code. Recheck the code list and try again.

5. With your TV on, press CHANNEL Up. If the TV responds, no further programming is required.

CHANNEL



Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

6. Enter your code here for easy reference.

TV

HITACHI
TV IN KITCHEN 507

Programming Your VCR

1. Manually turn on the VCR.
2. Press and hold the CODE SEARCH button until the indicator Light lights; then release the CODE SEARCH button.
3. Press and release the VCR button (the Indicator Light will blink and then remain lit)
4. Find the three digit code for your VCR in the code list in this booklet and enter it using the Number Buttons.

After your code is entered, the indicator will turn off.

Note: If the LED blinked rapidly when you entered the code you may have entered invalid code. Recheck the code list and try again.

5. With your VCR on, press CHANNEL Up. If the VCR responds, no further programming is required.

Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

6. Enter your code here for easy reference.

VCR

Note: The REC button must be pressed TWICE to record from your VCR. For brand VCRs, press the REC button once, then press it again for three seconds.

Programming Your BOX

1. Manually turn on the Cable Box.
2. Press and hold the CODE SEARCH button until the Indicator Light lights; then release the CODE SEARCH button.
3. Press and release the CBL button (the Indicator Light will blink and then remain lit).
4. Find the three digit code for your Cable box in the code list in this booklet and enter it using the Number Buttons.

After your code is entered, the Indicator will turn off.

Note: If the LED blinked rapidly when you entered the code you may have entered a invalid code. Recheck the code list and try again.

5. With your Cable Box on, press CHANNEL Up. If the Box responds, no further programming is required.

Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

6. Enter your code here for easy reference.

Cable Box

CODE SEARCH

VCR

 


CHAN+



CODE SEARCH

CBL

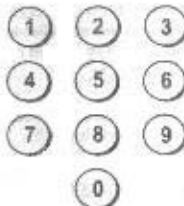

CHAN+



Auxiliary Programming

Aux button allows you program a CD, secretary and TV, or VCR

1. Manually turn on the device you wish to program.
2. Press and hold the CODE SEARCH button until the Indicator Light lights, then release the CODE SEARCH button.
3. Press and release the Aux button (the Indicator Light will blink and then remain lit).
4. Find the three digit code for your device in the code list in this booklet and enter it using the Number Buttons.

After your code is entered, the Indicator will turn off.

Note: If the LED blinked rapidly when you entered the code you may have entered invalid code. Recheck the code list and try again.

5. With your device on, press CHANNEL Up. If the Box responds, no further programming is required.

 
Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

6. Enter your code here for easy reference.

AUX

CODE SEARCH

AUX

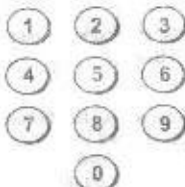

CHAN

 


Programming with Code Search

If your code for your TV, VCR, Cable Box or CD Player is not listed, try the following procedure to find the code for your device.

1. Manually turn on the device you wish to program.
2. Press and hold the CODE SEARCH button until the Indicator Light turns on, then release the CODE SEARCH button.
3. Press TV, VCR, CBL or AUX (depending on which device you wish to program). The Indicator Light will blink again then remain lit.
4. Press the POWER button until the device shuts off, this may take up to 300 tries. (If you skip over a code, press CHANNEL DOWN to back up).
5. Press MUTE to complete setup.
6. After you found your code through code search identify your code number for future use.

CODE

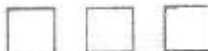


Code Identification

1. Press and hold CODE SEARCH until Indicator light turns on. Release CODE SEARCH button.
2. Press and release desired Mode button (TV, VCR, CBL, AUX). Indicator light will blink once to indicate key-press acceptance.
3. Press and release the CODE SEARCH button, indicator Light will blink off to indicate key-press acceptance.
4. To find the first digit press the numeric keys from 0 to 9, when the Indicator Light blinks off, this is the first stored digit. repeat to find the second digit.
5. To find the third digit, repeat step four. This time the Indicator Light will remain off once the key corresponding to the third digit is pressed.
6. Enter the code number on the proper page.

CODE SEARCH



 CODE SEARCH

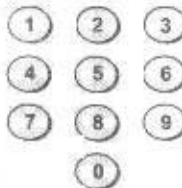

TV Codes

ADMIRAL	791	918
ADVENTURA	357	517
AERO	485	467
ALLERON	396	
AKA	394	
ANAPH	730	883
ANSTRAD	630	
ANIMATIONAL	194	885 961 868 829
AOC	892	843 162 119 211
ARCHER	302	892 814
AUDIOWAX	396	
BELOAR	892	
BELLS HOWELL	398	891 761
BENEFIT	888	
BRONSONIC	216	296
BROWWOOD	892	
CARDLE	892	019 403 503
CASPERHART	888	
CELEBRITY	811	
CENTURION	892	
CETRONIC	883	
CITROEN	882	142 248 482 401
	882	612 701 946 906
CLAYTONE	893	
CLASSIC	398	
CLP CLASSIC	298	004 312 008 066
CLP	888	
COLORTYPE	882	802 803
CONCERTO	882	902
CONTEGDOY	882	882 806 906 908
CRIBSON	888	
CRONIN	882	906 906
CURTIS MATHER	882	002 112 582 906
	882	910 791 704
CGC	888	906 906
DAEWOO	882	192 116 214 333
	311	314 403 407 502
	883	811 865 868 909
DAYTON	882	892
DEANSON	888	794
DUNCOTT	882	710
DYNASTY	888	
ELECTRA	791	
ELECTRON	882	831
ELECTRONIC	882	992 833 834 314
EMERSON	882	895 894 905 837
	184	185 196 114 236
	286	296 215 354 283
	318	319 492 902 585
	588	599 834 835 734
	782	884 895 935 881
	888	895 813
EEMSON	882	892
FBIER	784	895 810 832
FLUTON	206	
FLUXUS	888	893 895
FUTURETECH	886	890
GE	882	896 897 810 187
	114	310 312 502 811
	704	710 895 896 819
864	811	
O'BRIEN	882	713
GOLDSTAR	882	882 117 387 317
GRAND	267	582 713 818 814
GULBEY	888	882 888
HALLMARK	882	582
HANWARD	886	
HITACHI	882	016 110 216 313
	218	382 567 818
	518	687 818 701 782
	707	718 818 902 818
IMA	886	
IMPACT	882	
INTEC	715	
JAMES	319	
JCL	887	
JCR	881	
JCPENNEY	882	067 162 107 113
	310	313 482 502 511
	831	164 718 885 886
	818	887
	888	868
JEHSEN	887	167 188 238 386
JVC	892	518 917 897 702
	882	
KEASING	882	503 864
KATHMAN	119	
KFC	885	

SIGNATURE	882	
SINIGRA	891	731 889
SIMPSON	482	
SONIC	883	
SORY	302	831
SOUNDVISION	882	306 401 501 886
	888	
SQUAREVIEW	630	
SUN	882	888 886
STARLITE	886	
SUPER-WAX	882	
SUPREVE	881	
SYLVANIA	882	009 103 119 239
	388	482 488 682 688
	717	667 814
	812	882 926 964 902
SYMPHONIC	818	
TANDY	419	881
TATUNG	887	181
TECHNICS	882	882
TECHWOOD	882	887 191 882
TEHNIKA	882	889 182 112 303
	388	288 482 502 512
	891	810 701 906 882

TELECASTION	886	
TELENET	310	
TERA	881	701
TERRA	002	238
TKM	002	505
TOSHIBA	113	319 413 895 818
	812	863
TOTOVISION	882	
UNIVERSAL	888	888
VICTOR	788	887
VICTRON	882	182 882
VIDEO	888	
WARDS	882	888 889 582 100
	711	388 390 310 488
	502	506 512 801 701
	704	906 401 904 714
WHITE WEST	117	761
XR-999	117	761
YAMAPA	002	103 502 814
YUPTERU	888	
ZENTH	612	107 211 405 407
	812	861 181 113 818

VCR Codes

ADMIRAL	731	
ADVENTURA	234	821
AERO	234	234
AKA	334	821
AKAI	762	442 851
ALLERON	042	433 823
AMERICAN HIGH	607	
ASIM	882	
AUDIO DYNAMIC	882	
AUDIOVIDEO	603	
BELLS HOWELL	732	
BERNARDINI	882	
BROOKSONIC	134	146 734 832
CALIX	882	
CANDLER	882	113 323 328 888
	522	932
CANON	645	443 687 888
CASPHART	882	642
CARVER	887	
CCE	224	737
CITIZEN	332	152 232 321 328
	522	832
COLORTYPE	532	
DRAIG	393	782 889
CURTIS-MATHER	034	143 233 532 821
	881	852
DAEWOO	053	134 334 333
	334	434 532 542 842
DAYSON	642	
DOX	882	833 843
DYNASTONIC	224	311 811
ELECTRONICS	888	
ELECTROPHONIC	882	
EMERSON	882	934 838 836 838
	154	138 138 142
	286	296 215 245 228
	338	455 534 238 534
	838	667 733 734 736
	811	838 934 838
	888	538 638 938 792
FISHER	882	
	332	673 735
FUNAI	234	422 851
GARRARD	234	
GE	882	631 637 643 832
	886	
GOLDSTAR	888	817 645 892 749
GOVIDAR	888	
GRANDIENTE	284	
HARLEY GARDSON	284	
HARMAN KARSON	488	532
HERWOOD	737	
HEADQUARTER	732	
HITACHI	846	137 148 327 348
	162	31 843
HI-8	882	
INSTANT REPLAY	482	637 728
INTEC	882	
JCL	887	728

JE PENNEY	033	137 142 342 445
	882	837 732 741 833
JENSEN	131	742
JVC	682	545 632 645 732
	742	833 843
KENWOOD	235	532 821 732 742
	843	144
KLF	727	144
KIDKAP	887	837 735
LELO	234	821
LOKIX	737	
LIJI	832	831
MAONAX	342	545 143 243 443
	837	328 63 7 327
MAGNIN	882	
MARANTZ	038	943 232 932 833
	887	737 837 843
MASUNITA	607	
MTI	687	731
MORONEX	633	942 314 637 731
	732	731 821 842 811
	823	885
	128	534
NSA	882	
NSM TECHNOLOGY	882	
NOLAND	888	
NORLTA	737	257 342
MITSUBISHI	888	157 31 337 336
	428	534 538 628 742
	835	856 842
MONTGOMERY WARD	129	721
MUTOPOLA	887	721 733
MVC	881	888 888
NATIONAL	234	737 401 832 838
NEC	884	838 235 239 328
	438	537 636 732 742
	845	
NIKKO	882	
NORLEX	882	
OLYMPIUS	887	733
OPTIMUS	882	245 348 843 731
OPTONICA	843	139
ORION	734	
PANASONIC	182	144 244 344 242
	827	733
PCNTA	133	237 242 332
	843	
PHILCO	143	627 733 837 837
PHILIPS	884	116 242 837 837
PILOT	888	
PIONEER	137	823 838 738 843
PORTLAND	688	232 355 533 842
PROSCAN	881	
PROTEC	737	
PULSAR	842	
QUARTER	732	
QUARTZ	732	
QUASAR	143	166 837 733
REA	188	137 148 145 144
	248	249 342 446 545

ADDSHACK/REALISTIC	631	637	649	649	733
	740	839	831	837	838
	855	139	143	234	249
SAMSUNG	621	626	627	735	152
	733	831	842	853	853
RICOH	444				
SUNCO	842				
SAMSUNG	442	132	132	842	852
	854	858			
SAMSU	133	141	742	840	843
SANYO	732	832	863		
SCOTT	135	134	138	243	485
	823	824	840		
SEARS	633	637	231	342	486
	443	586	690	837	732
	733	837	833		
SHARP	139	142	245	330	134
	531	531	831		
SHYOKU	630	897	484	737	844
SHOGUN	839				
SIGNATURE	831				
SINGER	837	732	737		
SONY	832	484	841	845	848
ETS	137	342	637	735	
SYNAXIA	644	138	143	234	837
	851	837	837		

TV/CRs

ADVENTURA	117	831
BROKONIC	215	142
DAEWOO	263	324
EMERSON	268	735
FUJIA	717	831
GOLDSTAR	641	916
HITACHI	741	831
LG	717	831
MAGNAVOX	113	639
PANASONIC	258	542

Cable Boxes

ARC	352	162	232	321	781
	851	891			
ALLEGRO	338	148	732		
AMERICAST	538				
ANTONIOS	432	832	832	732	
CABLETEKNA	432				
CABLEVIEW	252				
CENTURY	732				
CTECH	352				
COLOR VIDE	852	852			
CONTRONICS	433	133			
CONTEC	233				
ELECTER	333				
GARRARD	732				
GC ELECTRONICS	332				
GE	680				
GENWIL	443	553			
GENERAL INSTRUMENT	431	437	431	556	558
	638	734	734	731	831
HAMLEN	637	763	853		
HITACHI	831				
HYPER	831				
JAEGLI	150				
JERROLD	852	854	162	236	352
	432	638	558	558	656
	667	791	951		
MAGNAVOX	754				
NEOSUN	234				
MOVIE TIME	134	891			
NBC	354	391			
OKA	233	356	851		
PANASONIC	486	736	851		
PANASONIC	181	655	664	732	754
PALIPS	832	854	852		
PIONEER	635	435	854		
PULSAR	254				

SYMPHONIC	234	631
TANDY	732	631
TASHIRO	933	
TATUNG	342	742
TEAC	146	234
TECHNICS	542	657
TERMINA	053	234
	733	831
TOSHIBA	132	132
	637	942
TOVEBION	032	553
TWK	004	336
UNITECH	963	
VECTOR RESEARCH	155	233
VICTOR	536	843
VIDEO CONCEPTS	133	733
VIDEOSONIC	933	
WARDS	063	132
	237	343
	731	731
WHITE WEST	633	833
XR-100	234	837
YAMAHA	632	632
ZENITH	033	642
	444	543
	844	844

WDC	713	833
RS	813	542
SAMSUNG	888	844
SANYO	379	148
SHARP	313	833
SYNAXIA	117	314
SYMPHONIC	117	831
XR-100	117	831
ZENITH	713	842
	833	117
	148	838
	117	324
	831	

RADIO SHACK	156	758
RCA	328	664
REALISTIC	552	
REGAL	853	
REGENCY	264	
RESEMBLY	851	
RUNCO	254	
SAMSUNG	932	938
SCIENTIFIC ATLANTA	357	233
	252	233
SIGNAL	487	657
SIGNATURE	951	452
SILMARK	663	
SPRINGER	661	
STANDARD COMPONENTS	356	
STARCOM	362	453
STARGATE	933	453
STARBUCK	488	
STAR BRIGHT	807	
STAR BRIGHT CABLE SERVICE	356	
STAR TRAK	257	
TANDY	608	
TELEVIEW	853	
TESSCAM	956	
TOPCON	362	567
TOSHIBA	254	706
TUSA	453	
TWE	354	
UNIKA	486	552
UNITED ARTISTS	851	752
UNITED CABLE	791	
UNIVERSAL	452	552
VIDEO TECH	893	753
VIDEOMAY	356	
VISIONSTAR	133	154
ZENITH	858	138
	456	457
	557	767
	837	837
	853	957

Satellite Systems

AMPLICA	168	
CHARMEL MASTER	993	993
CHAPPARAL	991	993
CHEYENNE	791	
DISH NETWORK	456	
DRAKE	384	881
DX AMERICA	452	833
ECHOSPHERS	488	
ECHOSTAR	454	888
FUJITSU	794	894
GE	299	897
GENERAL INSTRUMENT	382	370
	896	964
HITACHI DBS	718	814
HUGHES SATELLITE DBS	458	548
JAMEL	282	
JERROLD	343	
KENWOOD	485	
LEADER	958	
MAGNACOM	956	
MAGNACOM DBS	888	

MORSTAR	763	839
PANASONIC DBS	268	
PALPS	569	
PRIMESTAR	359	
PROCAN	263	967
RCA DBS	263	897
REALISTIC	382	945
SCIENTIFIC ATLANTA	789	
SERRA I & II	581	
SOFT DBS	487	
STAR BRIGHT	853	
STAR TRAK	465	
STI	482	582
SUPER GUIDE	585	962
TOSHIBA	882	
TOSHIBA DBS	684	768
UNITED	794	962
VIDEO DBS	794	
VIDEO CIPHER	053	
ZENITH	053	989
	881	188
		216
		384

Home Control

GE	567
HOME AUTOMATION	968

X-10(NEC)	968
-----------	-----

Audio

DARVER	187
CITIZEN	238
DEMON	287
FISHER	687
GOLDSTAR	232
HARMON HARDON	836
JVC	977
KENWOOD	287
MAGNAVOX	687
MARANTZ	068
OKIYO	196
OPTIMUS	091
	382
	386
	466
PANASONIC	937
PHI PS	827

RCA	195	287	763
REALISTIC	897		
RS ORIGINAL	391	286	286
SANYO	186		
SCOTT	482		
SHARP	354	886	763
SHERWOOD	286	388	
SIEMENS	899	146	168
TEAC	493	455	955
TECHNICS	236	688	688
VENTURE	887	886	794
YAMAHA	766	766	
ZENITH	284	197	197
	500	501	888
	888	888	888

DVD Players

AKAI	877
DEWIL	172
HITACHI	372
JVC	372
MAGNAVOX	671
MARANTZ	871
MITSUBISHI	372
PANASONIC	172
PHILIPS	871

PILOTT	872
PROSCAN	472
RCA	472
SANSUNG	872
SHARP	871
SONY	871
TOSHIBA	871
YAMAHA	172
ZENITH	672

Laser Disc

DEMON	639
PIONEER	573
PROSCAN	338
RCA	335

SANYO	232
SONY	441
ZENITH	352

CD Players

ADC.....	801
ADCOM.....	307 781
AKAI.....	831 981
AKAI.....	187 308 506
AUDIOALCHEMY.....	832
AUDIOTECHNICA.....	182 356
BSX.....	892
CALIFORNIA AUDIO LABS.....	287
CAPIEDRONE.....	882
CARERA.....	682
CARVER.....	198 282 382 482
CITIZEN.....	258
CURTIS MATHES.....	369
DEMON.....	982 782
EMERSON.....	791 882 932
FISHER.....	302 182 282 332 382
GE.....	487
GE.....	188
GENEXCA.....	802 587 682 682
GOLDSTAR.....	502 627 638
HARMON KARDON.....	853 784
HITACHI.....	825
INTEL.....	792
JC PENNEY.....	292 604
JVC.....	882 906
KENWOOD.....	892 384 184 388 488
.....	587
KRELL.....	282
KYOCERA.....	681
LUCMAN.....	284 384 588 488
LIU.....	282 882
MARAVON.....	282 888 708
MARANTZ.....	282 484 524 888
MOE.....	358 584
MOE.....	738
MUSKON.....	282
MITSUBISHI.....	734 884
NAC.....	598 988 787
NAKAMICHI.....	882 738 884
NEC.....	584

NEC.....	182 282 588 882
NEW.....	282
OMYD.....	788 285 887 738
OPTIMUS.....	382 684 890 282 288
.....	290 482 482 488 508
.....	885 738 882
PARASONIC.....	287 988 988
PHILIPS.....	131 282 738
PIONEER.....	482 507 798 888
PROTON.....	282
QUASAR.....	287
RCA.....	195 382 791 882 938
.....	887
REALISTIC.....	282 388 482 582 684
.....	585 791 882 982
ROTEL.....	282
RS ORIGINALS.....	288 482
SAC.....	282
SAMSUNG.....	788
SANSUI.....	088 888 282 382 587
SANYO.....	188 188 382 487 888
SCOTT.....	788 888 988
SEARS.....	282 282 382 882
SHARP.....	282 582 584
SHERWOOD.....	288 488 584 738
SHURE.....	884
SONY.....	398 288 488 688 884
STS.....	881
SYLVANIA.....	282
SYMPHONIC.....	588
TEAC.....	382 584 585 588 688
.....	788
TECHNICS.....	287 288 687 888
THETA DIGITAL.....	788
TOSHIBA.....	787
VECTORRESEARCH.....	682 882
VICTOR.....	882
KAWAHA.....	088 182 288 388 888
ZEMTH.....	084 282 382 588 688

Troubleshooting


Problem	Possible Solutions
Remote does not operate your product.	<ul style="list-style-type: none"> • Press the button of the product you want to control. • Program remote with a new code. • Install new batteries. Remote may not be compatible with your product.
Remote does not operate some features of your product.	<ul style="list-style-type: none"> • Program remote with a new code. • Remote may not be able to operate all features of your product.
Indicator light blinks after you program a product code.	<ul style="list-style-type: none"> • Remote did not accept the code. • Try to program the code again or try a different code.

Product Operation

After the batteries are installed and you have programmed the remote for the codes that operate your products, you can use your remote to operate a TV, VCR, CD Player or Cable Box.

TV

 Press TV First

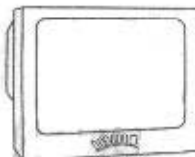

VCR

Press VCR First



Cable Box

Press CBL First



Second VCR

or

CD Player*

Press AUX First



To Operate:

1. Press the TV, VCR, CBL or AUX button (depending on which product you wish to operate).
2. Aim the remote at the product.
3. Press POWER to turn on the product.
4. Press other buttons to operate the features of your product.

*Includes any device described in the code list.