 
 
 
 


Cover/Front of Package



**Do Not Print On
Inside of Cover**



Thank you for purchasing this RCA Universal Remote Control. This product is designed to provide years of service operating a wide variety of video components.

Please retain this guide for future reference.

Table of Contents

Installing The Batteries	2
Button Description	3-4
Programming The Remote	5
Using The Remote	6
Changing The RF Remote Code.....	7
Programming For TV	8-9
Programming For VCR's	10-11
Programming For Cable	12
Programming For AUX	13
Menu Functions	14
Trouble Shooting.....	15
RCA Accessories	16
RCA Accessories Order Form.....	17
Warranty	18

This Universal Remote Control is already programmed for most RCA, GE and ProScan TVs, VCRs, DBS Systems and DVD Players

Note: For users of RCA, GE and ProScan DBS Products, older DBS models require that the INFO or MENU Button on this remote be used to make program selections. Use the OK Button for making program selections on newer RCA, GE and ProScan DBS models.

IMPORTANT NOTE: The DVD button ONLY functions with RCA, GE and ProScan Players.

Battery Installation

Your Universal Remote requires 2 new AA alkaline batteries.

To install the batteries:

1. Turn the remote over and push down on the cover and slide it off.
2. Insert the batteries, matching the batteries to the (+) and (-) marks inside the battery case.
3. Slide the battery cover back into place.

Note: Reprogramming may be required after batteries are removed.

Button Description For Operation

ON•OFF

Turns the device you are controlling on or off. When pressed twice within two seconds, all devices that are on will be turned off (this feature only works with most RCA, GE and ProScan products). You can also use the ON•OFF button on the top (front panel) of the digital satellite receiver to turn the receiver off.

VCR

When programmed, tells the remote to control the VCR.

TV

When programmed, tells the remote to control the TV.

DVD

Tells the remote to control the DVD player.

Note: This button is only functional with RCA, GE and ProScan DVD players.

VCR2

When programmed, tells the remote to control a second VCR.

LED

This light turns red at each valid button press. When programming the remote control, it flashes or turns on or off to indicate programming status.

AUX

Acts as a "wildcard" button. It can be programmed to control another VCR, TV, satellite receiver or cable box. Or, it can be programmed to control some RCA audio products. Follow the direct entry programming instructions later in this section to program this button.

DIRECTV

Tells the remote to control the digital satellite receiver.

MUTE

When programmed, reduces the TV's volume to its minimum level. Press again to restore the volume.

SKIP

This button is not used by the digital satellite receiver. It is functional only with RCA, GE, Proscan TVs and VCRs.

CH + (up)/ - (down)

Use to scan up and down through the channels in the current channel list. If you are in the program guide or menu system, use the CH +/- buttons to page up and down a screen at a time. You can also use the CH +/- buttons on the top of the digital satellite receiver to change the channel.

VOL down and up

When programmed, adjusts the audio volume of your TV.

FETCH

Either brings up the Fetch menu or tells the receiver to take the action you programmed it to take.

GO BACK

Moves you back and forth between the last two selected channels. In the menu system, returns you to the previous screen.

GUIDE

Brings up the program guide. Subsequent presses of the GUIDE button switch between the Detail and Grid guide formats.

INFO

Brings up the on-screen channel banner, password challenge, or purchase offer screen. Press again to get program details. In the program guides, press to get information about the high-lighted program or channel.



 
Button Description For Operation

ARROWS

Use the navigation arrows to move the on-screen highlight up, down, left, or right. Using the arrows to highlight a menu item is also called "pointing."

OK

Selects a highlighted choice if you are in the menu system. After entering a one, two, or three-digit DIRECTV channel number, press to tune to the channel. If you are entering a number other than a DIRECTV channel number (for instance, to tune your VCR to a channel), you do not need to press this button.

Press the OK button when the Interactive TV icon () appears on the screen. Pressing OK will display more information and offer the chance to interact in some way with what is displayed on screen.

MENU

Displays the Main Menu. If you are already in the menu system, press OK or MENU to select a highlighted choice. When you are using the remote control to operate an RCA, GE or ProScan VCR (the remote is in VCR mode), the MENU button functions as a PROGRAM button. **CLEAR** Removes the on-screen displays and returns you to normal viewing.

Digit Buttons (0-9)

Use the digit buttons to tune directly to a four digit DIRECTV channel or non-DIRECTV channel. If a DIRECTV channel number is less than four digits long, you must press OK after entering the channel number. If you are in the menu system, use the digits to highlight and select items (use 0 to return to the previous menu screen).

WHO•INPUT

Press the WHO button one or more times to scroll through the user profiles. When you are using the remote control to operate an RCA, GE, or ProScan TV (in TV mode), press the WHO•INPUT button one or more times to scroll through the available video input sources.

ANTENNA

In TV mode, lets you switch the source of the video signal from satellite signals to an off-air antenna or cable signal when using the OUT TO TV jack. In VCR mode, function as a TV/VCR input button.

Transport Buttons (REVERSE, PLAY, FORWARD, RECORD, STOP, PAUSE)

When programmed, these buttons are used to control an auxiliary device, such as a VCR or DVD player. Note that if your VCR Controller is connected, the RECORD button can be used to schedule a timer recording when using the Program Guide or to begin recording while watching a program (in VCR mode).

Programming The Remote Control

The remote is already programmed to control most RCA, GE and ProScan devices; it may need to be programmed to control other manufacturers' brands.

Testing The Remote Control

To determine whether the universal remote control needs to be programmed, turn a device on, such as a VCR, point the remote at the VCR, and press the VCR button. Then press ON•OFF or CH + or CH - to see if the VCR responds to the remote commands. If not, the remote needs to be programmed.

There are two ways to program the remote control: Automatic or Direct Entry.

Using Automatic Code Search

The following instructions can be used to program the remote to control many of the devices connected to your TV. If you want to exit the automatic code search without programming any of your devices, press the CLEAR button until the LED (red light) turns off.

1. Turn on the device you want to control (VCR, satellite receiver, etc.).
2. Press and hold the button you want to program. While holding the device button, press and hold ON•OFF until the LED on the remote control turns on, then release both buttons.

Note: The AUX button can only be programmed using Direct Entry Mode. See "Using Direct Entry," later in this section, for details.

3. Point the remote at the device, press and release PLAY, then wait five seconds or until the LED stops flashing.

At this point the remote control is searching for the correct code to program. If, after five seconds, the device you want to control does not turn off, press and release PLAY again to tell the remote to search the next set of codes.

Continue pressing the and releasing PLAY until the device turns off or you have searched through all of the codes. There are 20 total sets of codes. If the device does not turn off after pressing PLAY 20 times, then the remote cannot control that particular device.

If the device you want to control *does* turn off:

1. Press and release REVERSE, then wait two seconds. Repeat this step until the device turns back on.
2. To finish, press and hold STOP until the LED on the remote control turns off.

Using Direct Entry

1. Turn on the device to be programmed.
2. Look up the brand and code number(s) for the device on the code list at the end of that specific section.
3. On your remote control, press and hold the device button you want to program.
4. Enter a code from the code list.
5. Release the device button, and then press ON•OFF to see if the device responds to the remote control commands. If it doesn't, try pressing the device button and then ON•OFF again.
6. If you get no response, repeat these steps using the next code listed for your brand, until the device responds to the remote control commands.

Using The Remote To Control A Device

Once the remote has been programmed successfully, you are ready to use it to control your devices.

To operate the device:

1. Press the device button (TV, VCR, DIRECTV, VCR2, or AUX) to set the remote to control the device.
2. Press ON•OFF to turn the device on or off.
3. Use the remote control buttons that apply to that device.

Note: If your remote is programmed to control a VCR, you only need to press the RECORD button to begin recording from video.

Modes Of Operation

Because this universal remote can control several different devices (DVD player, VCR, cable box, etc.) it uses operational modes triggered by the device buttons. For example, if you wanted the remote to control the TV, you would press the TV button to put the remote into TV mode. Then, if you want to play a videotape press VCR then PLAY (pointing the remote at the VCR).

Controlling A Second Satellite Receiver

The remote can control two satellite receivers. From the Main Menu, select Options, then System Options, then Remote Setup. Then follow the on-screen instructions and enter the appropriate code from the Satellite Receiver list at the end of this section. By default, the DIRECTV button is used to control the first satellite receiver and the AUX button is used to control the second satellite receiver.

If your second receiver is an RCA, GE, or ProScan and you want to control it using the AUX button, use code 5001. Code 5000 is used by the DIRECTV button.

Changing The RF Remote Control Code


Your remote control is equipped with RF functionality. This means that the remote can control the digital satellite receiver using both IR (infrared) signals and RF (radio frequency) signals. IR signals require line-of-sight to the receiver's front panel remote sensor. RF signals can control the receiver from other parts of your house...even through walls. Installing your RF remote control antenna will increase the range of our RF remote signal. See the owner's manual of your DBS system for more details.

If you are experiencing interference from other RF devices, you may need to change the RF remote control code. Change the code by doing the following:


1. Select Options in the Main Menu.
2. Select System Options.
3. Select RF Remote
4. Choose a number between 000 and 255. Follow the on-screen instructions to enter it as your RF remote control code.

Programming For TV

1. Turn on the device to be programmed.
2. Look up the brand and code number(s) for the device on the code list at the end of this section.
3. On your remote control, press and hold the device button you want to program.
4. Enter a code from the code list.
5. Release the device button, and then press ON•OFF to see if the device responds to the remote control commands. If it doesn't, try pressing the device button and then ON•OFF again.
6. If you get no response, repeat these steps using the next code listed for your brand, until the device responds to the remote control commands.

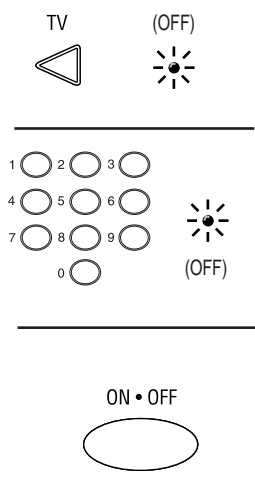

7. Enter your code here for easy reference

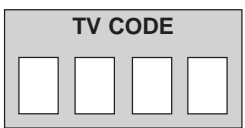

TV Code List


Abex.....	1172	Electrohome.....	1003, 1004, 1006, 1019, 1022
Admiral.....	1001, 1173	Emerson	1004, 1006, 1012, 1014, 1023
Adventura.....	1174	1024, 1025, 1026, 1027, 1028
Aiko.....	1016	1029, 1030, 1031, 1033, 1034
Akai.....	1002	1035, 1036, 1038, 1039, 1041
Alleron	1046	1042, 1043, 1044, 1046, 1047
Amtron	1038	1123, 1124, 1162, 1171, 1176
Anam National.....	1003,1038	1177, 1179, 1191
AOC	1004, 1005, 1006, 1007, 1175, 1176	Envision	1004, 1006
Audiovox	1038	Fisher.....	1048, 1049, 1050
Belcor.....	1004	1051, 1162, 1180
Bell & Howell.....	1001, 1083, 1162	Fujitsu	1046
Bradford	1038	Funai	1038, 1046
Brokwood	1004	Futuretec.....	1038
Candle.....	1004, 1006, 1008, 1174	GE	1000, 1003, 1004, 1006, 1022
Capehart	1175	1052, 1054, 1055, 1087, 1164
Celebrity	1002	1165, 1166, 1167, 1168, 1181
Centurion	1009	Gibraltar	1004, 1151
Citizen.....	1004, 1006, 1008, 1016, 1038, 1105	Grundy	1038, 1046, 1171
.....	1171, 1174, 1177	Hallmark.....	1004, 1006
Clairtone	1176	Harvard.....	1038
Colortyme.....	1004, 1006	Hitachi	1004, 1006, 1012, 1013, 1059, 1060
Concerto	1004, 1006	1061, 1135, 1136, 1137, 1138, 1139
Contec / Cony.....	1012, 1013, 1014, 1038, 1176	1140, 1141, 1142, 1143, 1144, 1145
Craig	1038	1146, 1148, 1150, 1179
Crown	1038, 1171	IMA	1038
Curtis Mathes	1000, 1004, 1006, 1015	Infinity	1062
.....	1105, 1162, 1171	Janeil	1174
CXC	1038	JBL	1062
Daewoo.....	1004, 1005, 1006, 1016	JCB.....	1002
.....	1017, 1018, 1127, 1171	JC Penny.....	1000, 1004, 1005, 1006, 1008
Daytron.....	1004, 1006, 1171	1022, 1052, 1054, 1058, 1063
Dimensia.....	1000	1064, 1072, 1087, 1105, 1128
Dumont.....	1004, 1151	1171, 1172, 1181
Dynatech.....	1178	Jensen	1004, 1006
Electroband	1002, 1176	JVC	1012, 1013, 1054, 1060, 1065

TV Code List Continued


.....1066, 1067, 1089, 1157, 1158, 1159, 11821095, 1162, 1171, 1172
Kawasho.....1002, 1004, 1006	RCA.....1000, 1003, 1004, 1005, 1006, 1007
Kaypani.....11751019, 1096, 1098, 1099, 1100, 1101
Kenwood.....1004, 1006, 10191102, 1103, 1129, 1179, 1181, 1187
Kloss Novabeam.....1068, 1069, 1174, 11831188, 1190, 1198, 1199
KTV.....1038, 1070, 1171, 1176, 1177	Rhapsody.....1176
LG (Goldstar)1004, 1005, 1006, 1012, 1019, 1056	Runco.....1151
.....1057, 1058, 1155, 1156, 1171, 1172	Sampo.....1004, 1006, 1171, 1172, 1175
Loewe.....1062	Samsung.....1004, 1005, 1006, 1012, 1015
Logik.....10831019, 1104, 1105, 1106, 1171, 1172
Luxman.....1004, 1006	Sansui.....1191
LXI.....1000, 1006, 1049, 1062, 1071	Sanyo.....1004, 1048, 1049, 1050, 1080
.....1072, 1073, 1162, 11811107, 1108, 1162, 1180, 1189
Magnavox.....1004, 1006, 1008, 1019, 1062	Scotch.....1006
.....1068, 1069, 1074, 1075, 1076	Scott.....1004, 1006, 1012, 1024
.....1077, 1088, 1089, 1131, 11301035, 1038, 1046
.....1132, 1133, 1134, 1183, 1184	Sears.....1000, 1004, 1006, 1013, 1019
Majestic.....10831046, 1048, 1049, 1050, 1066
Marants.....10621071, 1072, 1109, 1110, 1162
Marantz.....1004, 1006, 1062, 10781180, 1181, 1189
Megatron.....1006, 1059	Sharp.....1004, 1006, 1012, 1029, 1095
MEI.....11761111, 1112, 1113, 1122, 1171, 1173
Memorex.....1001, 1006, 1082, 1083, 1162	Shogun.....1004
MGA.....1004, 1005, 1006, 1019, 1022	Signature.....1001, 1083, 1115
.....1051, 1079, 1080, 1082	Simpson.....1008
Midland.....1054, 1151, 1171, 1172, 1181	Sonic.....1176
Minutz.....1052	Sony.....1002
Mitsubishi.....1004, 1005, 1006, 1019, 1022	Soundesign.....1004, 1006, 1008, 1038, 1046
.....1051, 1079, 1080, 1081, 1082, 1083, 1125	Squareview.....1189
Montgomery Ward.....1083	SSS.....1004, 1038
Motorola.....1003, 1173	Starlite.....1038
MTC.....1004, 1005, 1006, 1105, 1176, 1178	Supre-Macy.....1174
Multitech.....1038, 1178	Supreme.....1002
Multivision.....1084	Sylvania.....1004, 1006, 1008, 1019, 1062, 1068
NAD.....1006, 1071, 1072, 11851069, 1074, 1075, 1076, 1077, 1088
NEC.....1003, 1004, 1005, 1006, 10891116, 1161, 1183, 1184
Nikko.....1006, 1016	Symphonic.....1033, 1038, 1189
NTC.....1016	Tandy.....1173
Onwa.....1038	Tatung.....1003, 1178
Optimus.....1185	Technics.....1054
Optonica.....1095, 1173	Techwood.....1004, 1006, 1054
Orion.....1035, 1191	Teknika.....1004, 1005, 1006, 1008, 1012
Panasonic.....1003, 1054, 1062, 11701013, 1016, 1038, 1046, 1076
Philco.....1003, 1004, 1005, 1006, 1008, 10121082, 1083, 1105, 1170, 1171
.....1019, 1062, 1068, 1069, 1075, 1077	Telecaption.....1117
.....1183, 1184	TMK.....1004, 1006
Philips.....1003, 1004, 1008, 1012, 1019, 1062	Toshiba.....1049, 1071, 1072, 1089, 1105
.....1068, 1069, 1074, 1075, 1076, 10861109, 1117, 1118, 1160, 1162
.....1087, 1088, 1089	Totevision.....1171
Pilot.....1004, 1171	Universal.....1052, 1087
Pioneer.....1004, 1006, 1090, 1091	Victor.....1066, 1182
.....1092, 1179, 1185	Vidtech.....1004, 1005, 1006
Portland.....1004, 1005, 1006, 1016, 1171	Viking.....1174
Price Club.....1105	Wards.....1000, 1001, 1004, 1005, 1006
Prism.....10541019, 1024, 1033, 1046, 1052
Proscan.....1000, 11811062, 1068, 1069, 1074, 1075
Proton.....1004, 1006, 1012, 1093, 11751076, 1083, 1087, 1088, 1095
Pulsar.....11511119, 1120, 1184
Quasar.....1003, 1054, 1070, 1094	Yamaha.....1004, 1005, 1006, 1019
Radio Shack / Realistic.....1000, 1004	Zenith.....1004, 1083, 1151, 1152, 1153, 1154
.....1006, 1012, 1038, 1049	

Programming For VCR1 & VCR2

1. Turn on the device to be programmed.
2. Look up the brand and code number(s) for the device on the code list at the end of this section.
3. On your remote control, press and hold the device button you want to program.

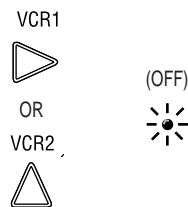

 4. Enter a code from the code list.

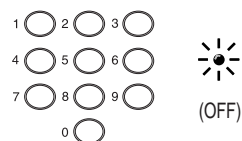

5. Release the device button, and then press ON•OFF to see if the device responds to the remote control commands. If it doesn't, try pressing the device button and then ON•OFF again.
6. If you get no response, repeat these steps using the next code listed for your brand, until the device responds to the remote control commands.



7. Enter your codes here for easy reference

VCR1 CODE	VCR2 CODE
<div style="display: flex; justify-content: space-around; width: 100%;"> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> </div>	<div style="display: flex; justify-content: space-around; width: 100%;"> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> <div style="border: 1px solid black; width: 20px; height: 20px;"></div> </div>

VCR Code List





Admiral	2131	Daewoo	2015, 2017, 2019, 2025
Adventura	2026	2026, 2027, 2028, 2110
Aiko	2027	Daytron	2110
Aiwa	2002, 2026	DBX	2009, 2010
Akai	2003, 2004, 2005, 2007	Dimensia	2000
.....	2008, 2111, 2112, 2113	Dynatech	2002, 2026
American High	2021	Electrohome	2014, 2029
Asha	2013	Electrophonic	2014
Audio Dynamics	2009, 2010	Emerson	2002, 2012, 2014, 2015, 2021, 2024
Audiovox	2014	2025, 2026, 2029, 2030, 2032, 2033
Bell & Howell	2011	2034, 2035, 2036, 2037, 2038, 2039
Beaumarck	2013	2040, 2041, 2042, 2044, 2045, 2047
Broksonic	2012, 2025	2065, 2105, 2113, 2116, 2117, 2130
Calix	2014	Fisher	2011, 2023, 2048, 2049, 2050
Candle	2013, 2014, 2015, 2016	2051, 2052, 2118
.....	2017, 2018, 2019	Fuji	2021, 2119
Canon	2021, 2022, 2114	Funai	2002, 2026
Capehart	2020, 2110	Garrard	2026
Carver	2062	GE	2000, 2001, 2013, 2021, 2022, 2053
CCE	2027, 2061	2115, 2120
Citizen	2013, 2014, 2015, 2016	Gradiente	2026
.....	2017, 2018, 2019, 2027	Harley Davidson	2026
Colortyme	2009	Harman Kardon	2009
Colt	2061	Harwood	2061
Craig	2013, 2014, 2023, 2061	Headquarter	2011
Curtis-Mathes	2000, 2002	Hitachi	2002, 2055, 2056, 2057
.....	2009, 2013, 2016, 2018	2107, 2111, 2120, 2122
.....	2021, 2022, 2024, 2115	HI-Q	2023
Cybernex	2013	Instant Replay	2021

VCR Code List Continued

JCL	2021	Quarter	2011
JC Penny	2009, 2010, 2011, 2013, 2014	Quartz	2011
.....	2021, 2022, 2055, 2056, 2058	Quasar	2021, 2022, 2125
.....	2059, 2060, 2107, 2118	RCA	2000, 2001, 2003, 2013, 2021
Jensen	2055, 2056, 2111	2055, 2056, 2082, 2083, 2084, 2085
JVC.....	2009, 2010, 2011	2086, 2087, 2088, 2089, 2090, 2091
.....	2018, 2058, 2111, 2123	2107, 2115, 2120, 2125
Kenwood	2009, 2010, 2011, 2016	Radio Shack / Realistic	2002, 2011, 2013
.....	2018, 2058, 2111, 2123	2014, 2021, 2022, 2023, 2026
KLH.....	2061	2029, 2049, 2050, 2096, 2131
Kodak	2014, 2021	Radix	2014
LG (Goldstar)	2009, 2014, 2018, 2054, 2121	Randex	2014
Lloyd	2002, 2026	Ricoh.....	2128
Logik	2061	Runco	2104
LXI	2014	Samsung	2005, 2013, 2015
Magnavox	2021, 2022, 2062	2033, 2053, 2112
.....	2063, 2104, 2108, 2124	Sanky.....	2104, 2131
Magnin	2013	Sansui	2010, 2092, 2111, 2123
Marantz	2009, 2010, 2011, 2016, 2018	Sanyo	2011, 2013, 2023
.....	2021, 2058, 2026, 2064	Scott	2012, 2015, 2025, 2032, 2035
Marta	2014	2038, 2065, 2093, 2116
Masushita	2021	Sears	2011, 2014, 2021, 2023, 2048
MEI	2021	2049, 2050, 2051, 2055, 2056
Memorex	2002, 2011, 2013, 2014	2107, 2118
.....	2021, 2023, 2026, 2104, 2131	Sharp.....	2002, 2017, 2029, 2094
MGA.....	2029, 2065, 2113	2095, 2096, 2131
MGN Tech.	2013	Shintom	2004, 2056, 2061, 2098
Midland	2053	Shogun.....	2013
Minolta.....	2055, 2056, 2107	Signature.....	2002, 2131
Mitsubishi	2029, 2055, 2056, 2065, 2066, 2067	Singer	2021, 2061, 2128
.....	2069, 2070, 2071, 2072, 2073, 2074	Sony	2002, 2004, 2098, 2099, 2119, 2128
.....	2106, 2113, 2123	STS	2021, 2107
Montgomery Ward.....	2075, 2131	Sylvania	2002, 2021, 2022, 2026
Motorola	2021, 2131	2062, 2063, 2065, 2124
MTC	2002, 2013, 2026	Symphonic	2002, 2026
Multitech	2002, 2013, 2016	Tandy	2002, 2011
.....	2026, 2053, 2061	Tashiko.....	2014
NEC	2009, 2010, 2011, 2016, 2018	Tatung.....	2058, 2111
.....	2058, 2064, 2076, 2078	Teac.....	2002, 2026, 2058, 2085, 2111
.....	2079, 2111, 2123	Technics	2021, 2109
Nikko	2014	Teknika	2002, 2014, 2021, 2026, 2100, 2129
Noblex	2013	TMK	2013, 2024, 2047
Olympus	2021	Toshiba.....	2015, 2049, 2051, 2055
Optimus	2014, 2131	2065, 2093, 2116
Optonica	2096	Totevision	2013, 2014
Orion	2035	Unitech.....	2013
Panasonic	2021, 2022, 2109, 2125, 2126, 2127	Vector Research	2009, 2010, 2015, 2016
Pentax.....	2016, 2055	Victor	2010
.....	2056, 2107, 2120	Video Concepts.....	2009, 2010, 2015
Pentax Research	2018	2016, 2113
Philco	2021, 2022, 2062, 2063	Videosonic	2013
Philips	2021, 2062, 2096, 2124	Wards	2002, 2013, 2014, 2015
Pilot	2014	2021, 2023, 2026, 2029, 2055, 2056, 2061
Pioneer.....	2010, 2055, 2080, 2081, 2123	2096, 2101, 2102, 2103, 2107, 2116, 2131
Portland	2016, 2017, 2019, 2110	XR-1000	2021, 2026, 2061
ProScan	2000, 2001	Yamaha	2009, 2010, 2011
Protec	2061	2018, 2058, 2111
Pulsar	2104	Zenith.....	2004, 2098, 2104, 2119, 2128

Programming The AUX Button For Cable

    1. Turn on the device to be programmed.
2. Look up the brand and code number(s) for the device on the code list at the end of this section.
3. On your remote control, press and hold the device button you want to program.
4. Enter a code from the code list.
5. Release the device button, and then press ON•OFF to see if the device responds to the remote control commands. If it doesn't, try pressing the device button and then ON•OFF again.
6. If you get no response, repeat these steps using the next code listed for your brand, until the device responds to the remote control commands.
7. Enter your code here for easy reference

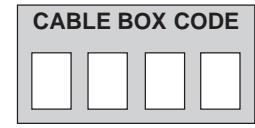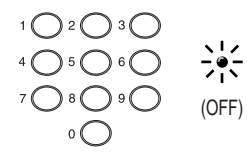

Cable Box Code List

ABC	5002, 5003, 5004, 5005, 5006, 5007, 5053	Pulsar	5026
Antronix	5008, 5009	RCA	5047, 5049, 5052
Archer	5008, 5009, 5010, 5011	Realistic	5009, 5049
Cabletenna	5008	Regal	5022, 5035
Cableview	5008	Regency	5017
Century	5011	Rembrandt	5003
Citizen	5011	Runco	5026
Colour Voice	5012, 5013	Samsung	5014, 5034
Comtronics	5014, 5015	Scientific Atlanta	5006, 5036, 5037, 5038
Contec	5016	Signal	5014, 5018
Eastern	5017	Signature	5003
Garrard	5011	SL Marx	5014
GC Electronics	5009	Sprucer	5052
Gemini	5018, 5019, 5049	Starcom	5007, 5018, 5053
General Instrument	5003	Stargate	5014, 5018
Hamlin	5020, 5021, 5022, 5035, 5045	Starquest	5018
Hitachi	5003	Tandy	5040
Hytex	5002	Televue	5014
JaSCO	5011	Tocom	5004, 5023, 5041
Jerrold	5003, 5005, 5007, 5018	Toshiba	5026
.....	5023, 5024, 5046, 5053	Tusa	5018
Magnavox	5025	TV86	5027
Memorex	5026	Unika	5008, 5009, 5011
Movie Time	5002, 5027, 5028	United Artists	5002
NSC	5002, 5027, 5028	United Cable	5053
OAK	5002, 5016, 5029	Universal	5008, 5009, 5010, 5011
Panasonic	5048, 5052	Video Way	5044
Paragon	5026	Viewstar	5015, 5025, 5027, 5040
Philips	5011, 5012, 5013, 5019, 5025	Zenith	5026, 5050, 5051
.....	5030, 5031, 5032		
Pioneer	5033, 5034		

Programming The AUX Button For Universal Satellite Or RCA Audio

You can assign any one of the following devices to the AUX button:


A second TV, VCR, Satellite System, Cable Box or RCA Audio

1. Manually turn on the device you wish to control.

Find the four digit code for the device you wish to program in the code list.


Device	Page
TV	8-9
VCR	10-11
Cable Box	12
RCA Audio	14
Satellite System	14

2. Press and hold the **AUX** button. While holding the device button, press the first number of your device code. If the first number is valid the LED will turn off.

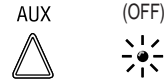


3. Enter the code using the Number Buttons.

After your code is entered, the LED light will turn on to verify if the code entered is valid. Release the device button. The LED will go off.

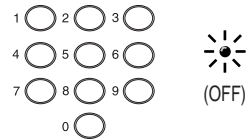


Note: If the code is invalid, the LED light will flash four times and abort the remote back to normal operation maintaining the current code.

4. Aim the remote at the device you wish to control and press the **ON•OFF** button. The device should turn off.

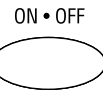


Note: If the device you have programmed does not respond, try all the codes for your brand. If the codes do not work, or your brand is not listed, try the Auto Code Search method on page 5.

5. With your device on, press **CH+ (Channel UP)** or **ON•OFF** button. If the device responds, no further programming is required.

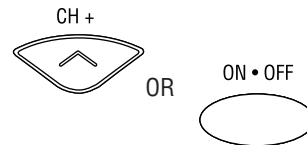

6. Enter your code and check the type of device you programmed here for easy reference.

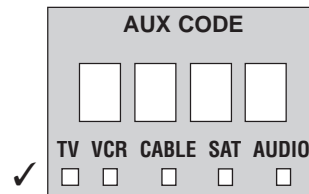

RCA Audio Code List

AM/FM	4003
Aux	4004
Phono	4005
CD	4007
Tape.....	4006

Satellite Receiver Code List


Chapparral	5056,5057	Realistic	5063
Drake	5058,5059	Sony	5072
GE.....	5000,5001	STS1.....	5064
General Instruments.....	5060,5061,5062	STS2.....	5065
Panasonic	5075	STS3.....	5066
Primestar	5076	STS4.....	5067
ProScan	5000,5001	Toshiba.....	5068,5073
RCA	5000,5001	Uniden	5069

Menu Function

The Menu Function is used to make changes in the selected settings such as setting color, channels, timer, etc. The MENU button invokes TV, DVD Player and DBS system modes. Each menu function will vary from brand to brand.

Entering the Menu Mode:

1. Push the device button on the remote for the desired menu screen.
2. Push the **MENU** button.
This allows you to view the menu of the device chosen.
The menu should now be visible on your television.

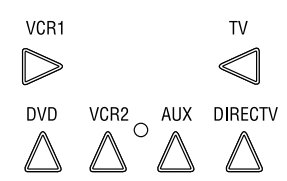

Note: With some brands you may have to press the **GUIDE** or **INFO** button for the on-screen menu.




3. While in Menu Mode these buttons will function as follows:

Navigation Left/Right buttons will operate as cursor right and left.

Navigation UP/DOWN buttons will operate as cursor up and down.

MENU or **OK** button applies the highlighted menu item.

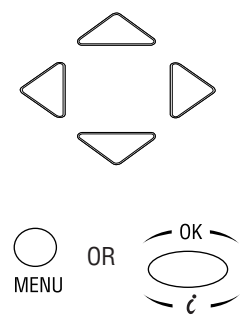

Not all functions in competitive models and brands of equipment may be fully supported.

EXITING THE MENU MODE

To exit the Menu Mode and clear the screen, push the **CLEAR** button to exit the Menu Mode.



Note: The remote will automatically exit the Menu Mode after ten (10) seconds of inactivity with no buttons being pushed.

Trouble Shooting

PROBLEM	SOLUTION
Red light not blinking when you press any key	A) Replace the batteries with 2 new AA alkaline batteries. B) Check if batteries are properly installed.
The remote does not operate your video devices	A) Try all the codes listed for your brand. B) Try the Auto Code Search method on page 5.
Not performing commands properly	Start Auto Code Search over again to locate the proper code for full compatibility.
Problems programming a (TV/VCR) Combo Unit	Try the VCR code for your brand. Some combo units, however, may require both a TV and a VCR code for full operation.
Problems changing channels	If your original remote required ENTER after a channel, press WHO•INPUT after you select a channel.
No response after pressing a key	A) Make sure you have new batteries and you are aiming your remote at your devices. B) Check that batteries are properly installed. See page 2.
OK button not responding	Try using the MENU or INFO button to make the selection while in the Program Guide.
Flashing Indicator Light	Invalid Code for the device. Check the Code list and reprogram the Remote Control.

Note: Reprogramming may be required after batteries are removed.

RCA Accessories

The following RCA accessories are available through your RCA dealer or by calling 1-800-338-0376.

D916 Wireless Phone Jack


Turn Just About Any Electrical Outlet Into A Phone Jack Instantly*

Exclusive technology sends phone signal through the electrical wiring in your home.

No Wiring, No Drilling, No Tools!
Installs In Two Simple Steps

STEP 1

Plug Base Unit into electrical outlet near an existing phone jack, and connect phone jack to Base Unit with included phone cord.

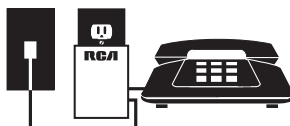

STEP 2

Plug Extension Unit into any other electrical outlet and connect phone to Extension Unit.



Works With:

- Corded Phones
- Cordless Phones
- Answering Machines
- Fax Machines

Compatible With:

- Call Waiting
- Call Forwarding
- Three-Way Calling
- Speed Dialing

* Extension jack also hooks up with DBS receiver.

D916
\$79⁹⁵

Plus Shipping/Handling & Sales Tax

ANT200 Amplified TV Antenna

To receive UHF or VHF stations or serve as a backup for cable outages, purchase the RCA Amplified TV Antenna. Switching between your cable or satellite and your antenna is made easy with an integrated A/B switch. Hooks up to any TV and includes all necessary accessories.

Features include:

- Dipoles tilt and rotate for improved picture
- UHF Loop turn range of 345°
- Gold-plated connectors for improved signal conductivity
- Manual Gain Control to Boost Signal
- Five-Year Limited Warranty
- Measures 8¾ H. X 8½ W. X 4¾ D.

ANT200
\$49⁹⁵

Plus Shipping/Handling & Sales Tax



ANT200

How To Order

To order, see your local RCA retailer. Or:

ORDER BY PHONE:

Have your Visa, MasterCard or Discover Card ready and call the toll-free number listed below. This number should only be used to place orders for the above listed Accessories.

1-800-338-0376

ORDER BY MAIL:

Complete this order form and mail to:

**RCA Accessories
PO Box 8419
Ronks, PA 17573**

Include this completed form with your order.

Description	Model #	Price	Qty.	Total
Wireless Phone Jack	D916	\$79.95		
Amplified TV Antenna	ANT200	\$49.95		
Sales Tax	We are required by law to collect the appropriate sales tax for each individual state, county, and locality to which the merchandise is being sent.			
Shipping and Handling				\$5.00
Total Amount Due				

Name: _____

Address: _____

City/State: _____

Zip: _____

Daytime Phone Number: _____

Check Enclosed Money Order Enclosed

Visa MasterCard Discover

Card Number:

□□□□ - □□□□ - □□□□ - □□□□

Exp: _____

Signature: _____

Shipping and handling is charged for all orders.

Please allow 4-6 weeks for mail orders.

90 Day Limited Warranty

Thomson multimedia Inc. warrants that for 90 days from date of purchase, it will replace this product if found to be defective in materials or workmanship. Return it postage prepaid to the Product Exchange Center address for prompt, no charge replacement with a current equivalent. This replacement is Thomson multimedia Inc.'s sole obligation under this warranty. Thomson multimedia Inc. will not be responsible for any incidental or consequential damages, or for any loss arising in connection with the use or inability to use this product. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty excludes defects or damage due to misuse, abuse, or neglect. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

© 2001 Thomson multimedia Inc.
Product Exchange Center
11721 Alameda Ave.
Socorro, TX 79927
PD770IB Rev0101
Trademark(s) ® Registered
Marca(s) Registrada(s)
Made In Mexico
www.rca.com

First Class
Postage
Required



Thomson Consumer Electronics
2000 Clements Bridge Road
Deptford NJ. 08096-2011

Attn: Remote Control
Purchase Registration

Inside Card

D770 Product Registration Card

Please complete and return this Purchase Registration Card right away. This information will help us get to know and service our customers better.

1. Mr. Mrs. Ms. Name: _____
Address: _____

2. Model: **D770**

3. Date of Purchase/Receipt as Gift: _____ 4. Price: \$ _____

5. Age of Purchaser/Gift Recipient:
 16-25 26-35 36-45 46-55 56+

6. What specific need did the Universal Remote help you resolve?
 A. Replacing A Lost Remote B. Replacing A Broken Remote
 C. Consolidating Remotes D. Adding an Extra Remote

7. Where will this remote primarily be used?
and with what brand? TV: _____
VCR: _____ Cable Box: _____
Satellite Receiver: _____ Audio System: _____
 A. Kitchen B. Bedroom _____
 C. Family Room/Living Room D. Other _____

8. How did you become aware of this remote?
 A. Advertisement B. Salesperson C. Store Display
 D. Received as a Gift E. Friend or Relative _____
 F. Other _____

9. What other brands did you consider buying?
 A. None C. One For All D. Zenith
 B. GE E. Gemini F. Sony G. Other _____

10. What factors most influenced this purchase? (Check up to 3)
 A. Brand B. Features C. Recommendation
 D. Price E. Received as a Gift F. Other _____

What suggestions do you have to improve this product?

Thank you for filling out this card. This information will help us better serve you and others who purchase RCA Consumer Electronics Products. We will not share your information with any other companies.

Inside Card