


Changing the manufacturer setting of the remote control

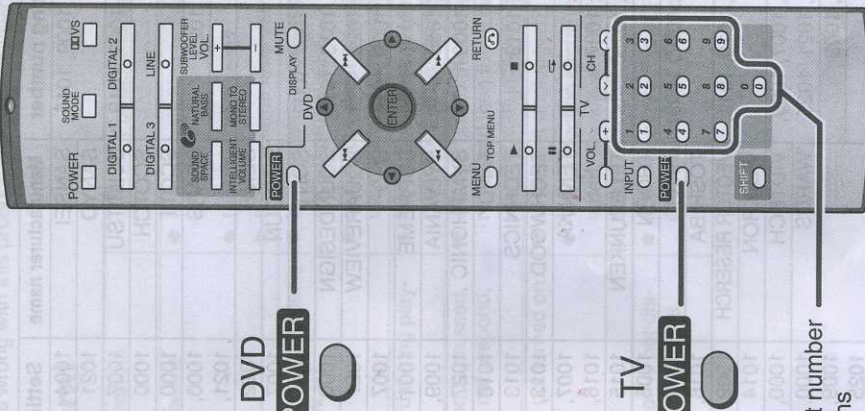

■ To change the TV manufacturer setting

While holding down the TV POWER button, enter the manufacturer setting number (4 digits) with the direct number buttons.

- Check the TV setting number to change the TV manufacturer setting (see page 28).
- After setting, check it operates properly.

■ To change the DVD player manufacturer setting

While holding down the DVD POWER button, enter the manufacturer setting number (4 digits) with the direct number buttons.

- After setting, check it operates properly.

DVD player setting number

Manufacturer name	Setting number	Manufacturer name	Setting number
SHARP	2006(*), 2021	PIONEER	2000, 2009, 2018, 2020
AKAI	2007	RCA	2008, 2011
DAEWOO	2027	SAMSUNG	2005
DENON	2010	SANYO	2024
FUNAI	2025	SONY	2002, 2016
HITACHI	2012	THOMSON	2015
LG	2022	TOSHIBA	2001
MICROSOFT	2017	VICTOR/JVC	2004
MITSUBISHI	2023	YAMAHA	2026
PANASONIC	2003, 2019	ZENITH	2014
PHILIPS	2013		

(*): The default manufacturer numbers are 2006 (SHARP) for DVD player.

- Notes:**
- Some models of Sharp's TVs and DVD players may not be operable.
 - As for manufacturers with 2 or more setting numbers, test them to select the right number.
 - Registering the manufacturer number deletes the number previously memorized.
 - When replacing the batteries of the remote control, the manufacturer number may return to default. In this case, register it again.
 - The manufacturer number cannot be registered depending on the TV or DVD player. Even if the number can be set, some buttons may not work.

Advanced Features

- Changing the manufacturer setting of the remote control -

Changing the manufacturer setting of the remote control (continued)

TV setting number

Manufacturer name	Setting number	Manufacturer name	Setting number
SHARP	1010(*), 1012, 1018, 1025	FUNAI	1027
AIKO	1019	GE	1000, 1004, 1008, 1013
AKAI	1009	GIBRALTER	1006, 1007, 1009
AOC	1007, 1009	GOLDSTAR	1000, 1002, 1007, 1009, 1015
AUDIOVOX	1004, 1019	GRANDIENTE	1015, 1026
BAUR	1005	HALLMARK	1000
BELCOR	1007	HARMAN/KARDON	1014
BELL & HOWELL	1021	HITACHI	1015, 1020, 1031
BROCKWOOD	1007	INFINITY	1014
BROKSONIC	1003	INTEQ	1006
CANDLE	1009, 1015	INTERFUNK	1005
CARNIVALE	1009	JBL	1014
CARVER	1014, 1026	JCB	1001
CELEBRITY	1001	JVC	1028
CINERAL	1004, 1019	KENWOOD	1007, 1009
CITIZEN	1009, 1015, 1016, 1019	KONIG	1005
CME	1005	KTV	1009
CONCERTO	1015	LG	1002, 1015
CROSLLEY	1014	LOEWE	1005
CURTIS MATHES	1004, 1009, 1010, 1013, 1014, 1015, 1016, 1020, 1021	LUXMAN	1015
		LXI	1000, 1014, 1021, 1022
DAEWOO	1004, 1007, 1017, 1019, 1021	MAGNAVOX	1009, 1014
		MARANTZ	1009, 1014
DAYTRON	1007	MEGATRON	1000, 1020
DENON	1020	MEMOREX	1000, 1015, 1021
DUMONT	1006, 1007	MEITZ	1000, 1007, 1009
DWIN	1010	MGA	1007, 1009
ELECTRONBAND	1001	MILDLAND	1006, 1013
EMERSON	1000, 1003, 1007, 1021	MINILITZ	1008
		MITSUBISHI	1000, 1005, 1007, 1032
ENVISION	1009	MTC	1005, 1007, 1009, 1015, 1016
FISHER	1021	NAD	1000, 1022
FORTRESS	1010		
FUJITSU	1023, 1029		

(*) : The default manufacturer numbers are 1010 (SHARP) for TV.

Manufacturer name	Setting number	Manufacturer name	Setting number
NEC	1007, 1009, 1015, 1026	SANSEI	1004
NIKKO	1000, 1009, 1019	SANYO	1021
NTC	1019	SCIMITSU	1007
OPTIMUS	1021	SCOTCH	1000
OPTONICA	1010, 1025	SCOTT	1000, 1003, 1007
ORION	1003	SEARS	1000, 1014, 1015, 1021, 1022, 1027
OTTO	1005	SEMP	1022
PANASONIC	1013	SHOGUN	1007
PENNEY	1000, 1007, 1008, 1009, 1013, 1015, 1016, 1022	SONY	1001
PHILCO	1007, 1009, 1014, 1020	SOUNDESIGN	1000
		SQUAREVIEW	1027
PHILLIPS	1014, 1033	SSS	1007
PILOT	1007, 1009	SUPREME	1001
PIONEER	1024	SYLVANIA	1009, 1014
PORTLAND	1007, 1019	SYMPHONIC	1027
PRISM	1013	TANDY	1010
PULSAR	1000	TECHNICS	1013
QUASAR	1006, 1007	TECHWOOD	1013, 1015
QUELLE	1013, 1025	TEKNIKA	1007, 1014, 1015, 1016, 1019
RADIO SHACK	1005	TELEFUNKEN	1015
		THORN	1005
RCA	1000, 1007, 1009, 1015	TMK	1000, 1015
		TOSHIBA	1016, 1021, 1022
REALSTIC	1007, 1010, 1011, 1013	VECTOR RESEARCH	1009
		VIDIKRON	1014
RUNCO	1000, 1007, 1009, 1015, 1021, 1025	VIDITECH	1000, 1007
SAMPO	1006, 1009	WARDS	1000, 1007, 1008, 1009, 1014, 1015, 1025
SAMSUNG	1000, 1007, 1009, 1015, 1016, 1030	YAMAHA	1007, 1009
		ZENITH	1006, 1019

SHARP