



# ZN411

## Front Cover Art





## Table of Contents

Introduction .....	3
Setup .....	4
Battery Installation .....	4
Battery Saver .....	4
Code Saver .....	4
Power-On default .....	5
TV Punch Through .....	5
VCR Punch Through .....	5
Code Setup .....	5
Button Functions .....	6
Advanced DVD Button Functions .....	8
TV/VCR Punch-Through .....	9
TV/VCR and TV/DVD Combo units .....	9
Code Entry .....	10
Direct Code Entry .....	10
Code Search .....	11
Code Identification .....	12
Sleep Timer .....	13
Code List .....	13
Product Operation .....	18
Troubleshooting .....	19

## Introduction

Congratulations on your purchase of a Zenith Universal Remote Control. Zenith Universal Remotes let you replace a broken or lost remote or combine more than one remote into one.

This remote control operates the common features of most but not all models and brands of IR Infrared Controlled Video Equipment. This remote may provide functions that are not available on your equipment. Some functions of your particular equipment (e.g. menu functions) may not be controlled by this remote. In such cases, use the original remote control for your equipment. Please use this manual to become familiar with your Zenith Universal Remote. After you are familiar with your remote the first thing you need to do is to install batteries and setup your remote for your particular product and brand.

 
Thank you for buying a Zenith remote and we hope it will give you many years of service.



## Setup


### Battery Installation

1. On the back of the remote, push down on the tab and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert 2 AAA Alkaline batteries.
3. Press the battery cover back into place.

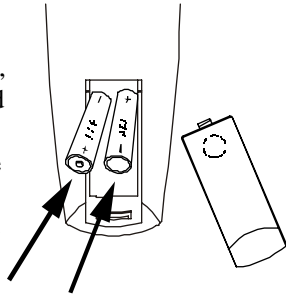

### Battery Saver

 Your remote automatically times out if the buttons are depressed more than 30 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

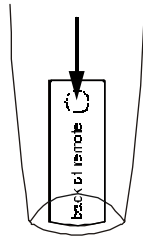

### Code Saver

You will have up to 10 minutes to change the batteries in your remote without losing codes you have programmed. However, do not press any buttons until batteries are installed in the remote. If buttons are pressed without batteries in the remote, all codes will be lost.

### Power-On Default

The remote powers on in TV mode.

### TV Volume/Mute Punch-Through

The TV Volume/Mute punch-through feature lets you control the Volume and Mute function of your TV in any mode programmed to be a VCR, Cable, or DVD device, without needing to change to TV mode.

### VCR Punch-Through

 
Punch-through to VCR mode is only allowed in TV, and Cable modes.

### Code Setup

The Code Search button is used to setup the remote. You can either setup the remote using the code for your brand of product, from the code tables, or you can search through the library of codes until you find a code that works for your product.


NOTE: You can store any kind of code under any mode (except TV). I.E. you can store a VCR code under the CBL key, or a DVD code under the VCR key, etc. However, you can only store TV codes under the TV key.

Code Search.

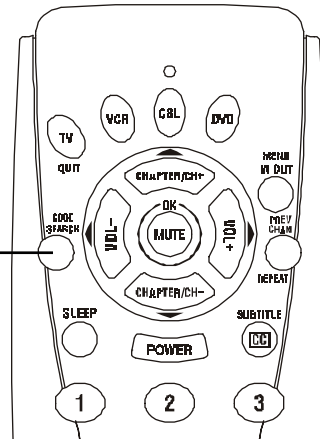

## Button Functions

 
Some buttons on the remote might have functions that are referred to by different names on the device you are controlling. E.G. Prev. Ch. may be called RECALL, or ENTER may be called DISPLAY. These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your product. E.G., your product must be equipped with Prev. Ch. ability for the Prev. Ch. button to operate this feature.

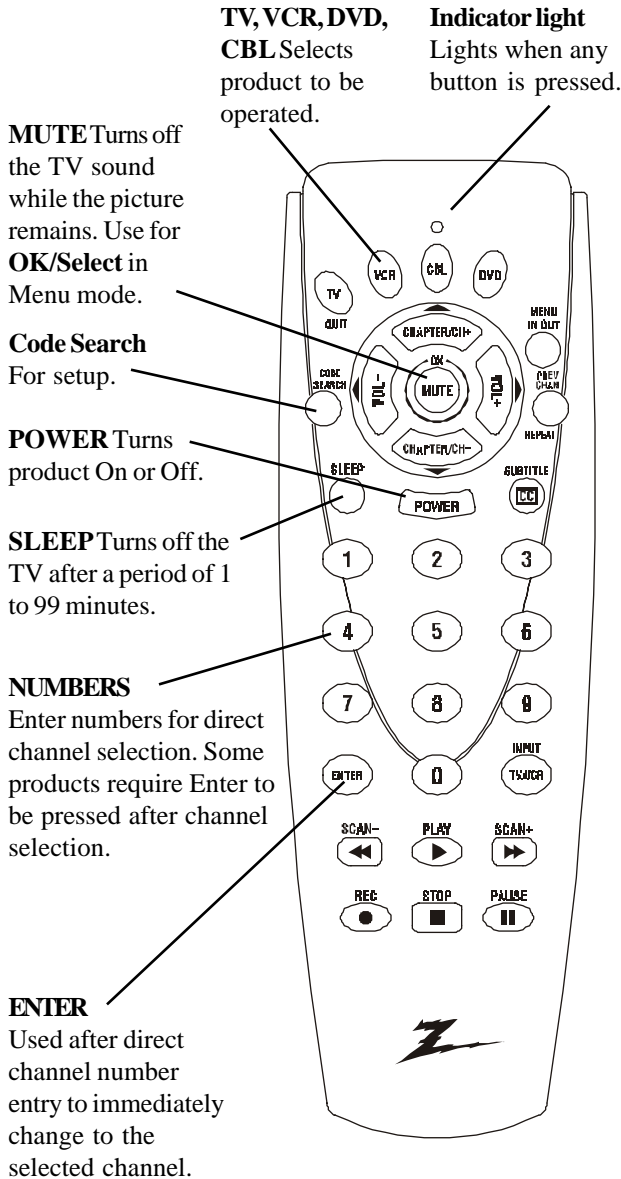

Note: The REC button must be pressed TWICE to record from your VCR. For some brands of VCRs, you might need to press the REC button once, then press it again for three seconds.

6

## Button Functions, cont.

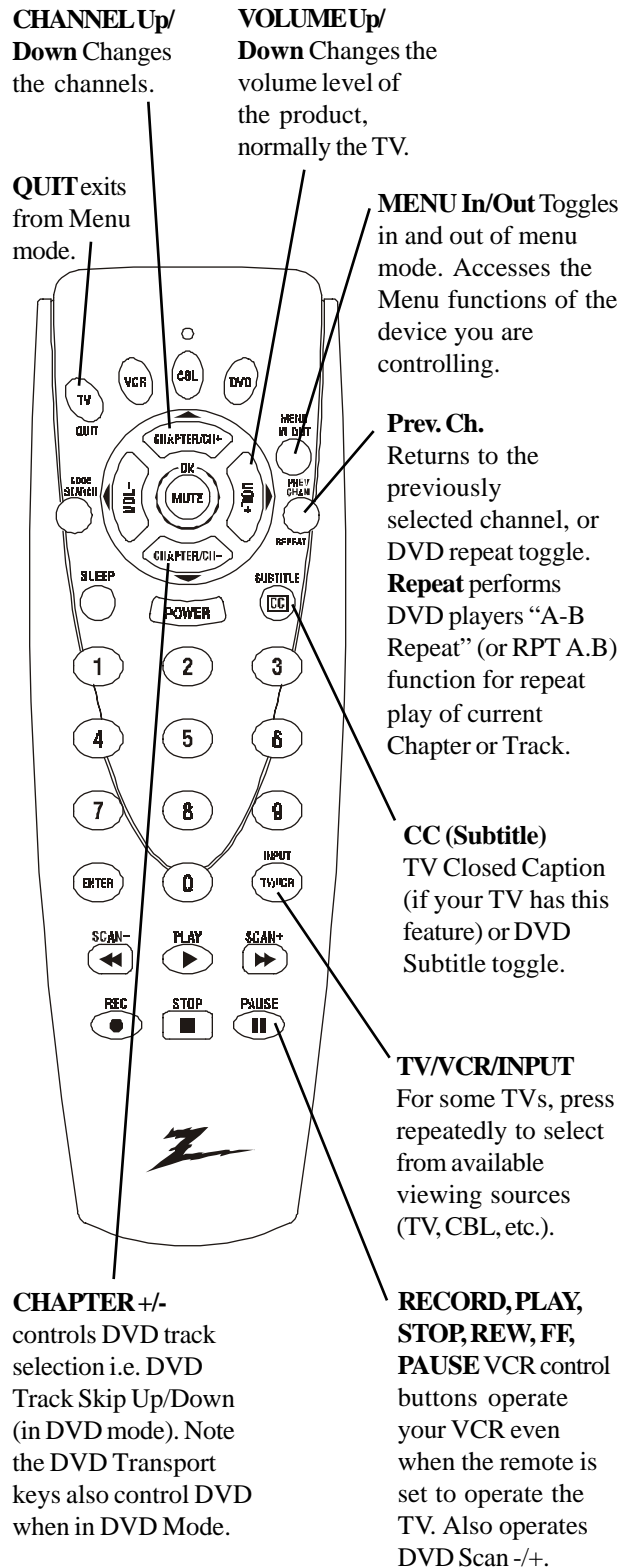 

7



## Advanced Button Functions

### DVD

**Scan+ and Scan-** buttons control the speed of Fast Forward and Reverse Playback respectively.

**Chapter+** and **Chapter-** buttons respectively locate the succeeding or preceding Chapters or Tracks on a disc.

**Repeat** button performs DVD players "A-B Repeat" (or RPT A.B) function for repeat play of current Chapter or Track.

**Play** button is used to start Disc playback and for Menu selection on some DVD players.

**Stop** button stops Disc playback.

**Pause** button will pause Disc playback - press Play to resume.

Note - in DVD Mode the INPUT button activates the DVD Player's SETUP Menu.

### MENU IN/OUT

The Menu In/Out button allows you to toggle in and out of Menu Mode. Pressing Menu In/Out brings up your device Menu. While in Menu mode the remote's red indicator light blinks continuously. The remote will exit Menu Mode after 20 seconds if no keys are pressed. While Menu Mode is active, the Menu, Channel, Volume, Mute and Mode keys perform the following functions:

**MENU IN/OUT** Exits/Enters Menu mode.

**CHANNEL UP/DOWN** Up/Down commands for on-screen Menu navigation.

**VOLUME UP/DOWN** Right/Left commands for on-screen Menu navigation.

**MUTE OK/Select** command for on-screen Menu selection.

**TV Mode Key** Quit, Exit or Clear command to quit on-screen Menu and return the remote to normal operation (red indicator is now off). Note this action is also available by pressing any Mode key.



### TV/VCR Punch-Through

VCR Punch-through is only available in TV, and Cable modes, i.e. the 6 VCR keys (Play, Pause, Stop, Record, FF and Rewind) will punch-through to the device programmed under VCR when in TV mode.

The TV/VCR/INPUT button performs the TV/VCR antenna switch function when in VCR Mode.

The TV/VCR/INPUT button performs the A.B switch function when in Cable Mode.

The TV/VCR/INPUT button performs the INPUT source switch function when in TV Mode.

The TV/VCR/INPUT button performs the DVD Setup function when in DVD Mode.

### Misc.

**CC** will activate the Closed Caption feature if your device has that feature.

 
### TV/VCR and TV/DVD Combo units

Note that for some TV/VCR and TV/DVD combo units you might need to set up two different buttons to control both parts of the combo unit. E.G., (referring to the Direct Code Entry section on the following page) you might need to set up a code under the TV button to control the TV part of the combo unit AND a separate code for the VCR or DVD under any other button you choose.

## Code Entry

### Direct Code Entry

1. Press and hold the Code Search button until the red indicator stays on. Release the Code Search button.
2. Press and release the desired mode button (TV, VCR, etc.).  
The red indicator blinks, then stays lit.
3. Enter the 3 digit code from the code tables. Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
4. With your device on, press CHANNEL Up. If the device responds, no further programming is required. Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

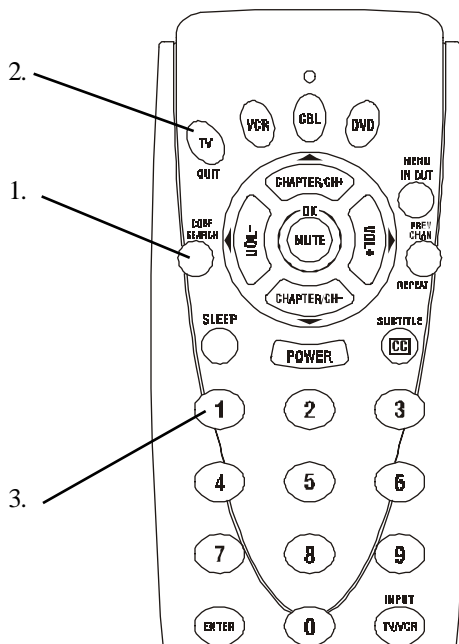

Write your codes down here for easy reference later.

Type	Type stored	Code
TV	TV	
VCR		
DVD		
CBL		


10

### Programming with Code Search

 1. Manually turn on the device (TV, VCR, etc.) to be controlled.
2. Press and hold Code Search button until the red indicator stays on. Release the Code Search button.
3. Press and release the desired mode button (TV, VCR, etc.).  
The red indicator blinks, then stays lit.
4. Press the Channel Up button repeatedly (up to 300 times) until the device to be controlled changes channel. The red indicator blinks, then stays lit. If you accidentally overshoot the code required, press the Channel Down button to backtrack through the library until the device changes channel. Pressing Channel Up changes direction to forward again. Press and release the Mute button to install the code.

The above assumes that you want to store VCR codes under the VCR button, DVD codes under DVD, etc. If you want to store a VCR code under DVD, etc., first follow the procedure on page 10 and try ANY DVD code from the code tables, e.g. press DVD in step 2, page 10, and then enter ANY VCR code. Then follow the steps above.

**Note:** If the device does not have a Channel Up button, use Play (VCR only) or Power instead. Code Search starts from the currently stored three digit number under that mode e.g. if the mode has 100 codes and the currently stored code is 050 then the Code Search starts from 051 continuing to 100 before looping back to 000 and finishing at 050. This simplifies the process if you find that several preprogrammed codes operate your device by allowing you to bypass codes already tried.

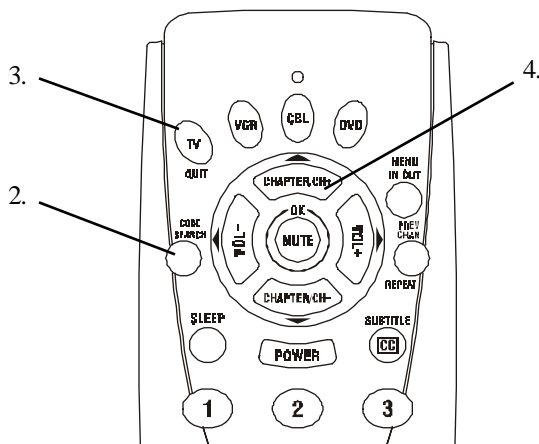


11

## Code Identification
 
### Code Identification

1. Press and hold Code Search button until the red indicator stays on. Release the Code Search button.
2. Press and release the desired mode button (TV, VCR, etc.).  
The red indicator blinks, then stays lit.
3. Press and release the Code Search button. The indicator light blinks off.
4. To find the first digit for the code stored under the mode key pressed in step 2, press each numeric key from 0-9 in turn. When the indicator light blinks off the number you pressed is the first digit for the code you are searching for.
5. To find the second digit, repeat step 4, this time when the indicator light blinks off this is the second digit.
6. Repeat step 4 again to find the third digit.

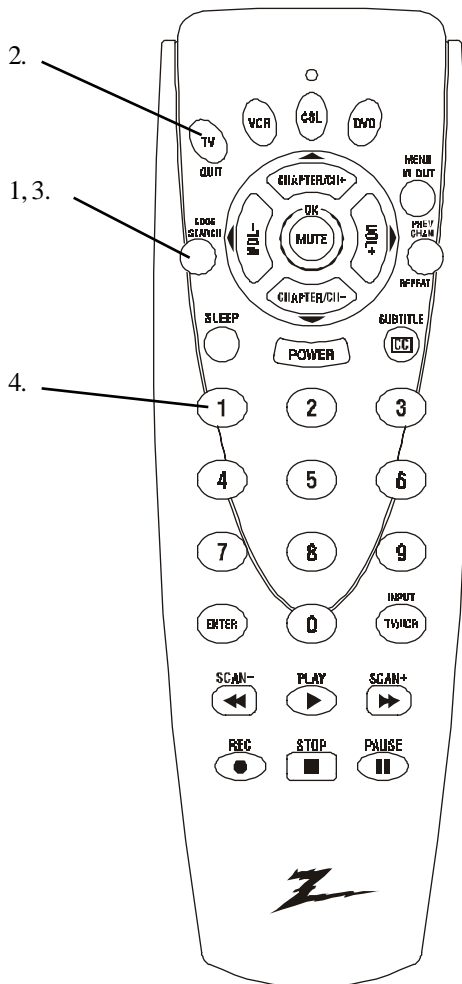

## Sleep Timer

The Sleep feature enables the remote to turn off the TV after a period of 1 to 99 minutes. Remote is to be in TV mode to set a Sleep Timer. This feature works even if your TV does not have this feature.

1. Press and release the TV Mode key.
2. Press and hold the Sleep button until LED remains on (occurring after approx. 2-3 seconds).
3. Release Sleep button.
4. Press and release the numeric keys (01-99) for the time required. The LED will blink off to indicate keypress acceptance and remain off after second keypress.
5. TV Sleep Timer now set.
6. **Leave the Remote pointing towards the TV with an unobstructed path.**

To cancel the Sleep Timer, press and hold the Sleep key until the LED blinks or press and release the Power key in TV Mode.

## Code List

### TV

ABEX .....	120
ADMIRAL .....	701 918
ADVENTURA .....	019
AIKO .....	407
AIWA .....	121 221
ALLERON .....	206
AMARK .....	603
AMTRON .....	906
AKAI .....	801
AMSTRAD .....	520
ANAM NATIONAL .....	104 805
.....	901 906 920
AOC .....	002 003 102 119
.....	217 302 502 814
ARCHER .....	603
AUDIOVOX .....	906
BANG & OLUFSEN .....	620
BELCOR .....	002
BELL & HOWELL .....	506
.....	601 701
BRADFORD .....	906
BROKSONIC .....	215 316
BROKWOOD .....	002
CANDLE ....	002 019 402 502
CAPEHART .....	119
CELEBRITY .....	801
CENTURION .....	502
CETRONIC .....	805
CITIZEN ....	002 112 402 407
.....	502 512 701 805 906 319
CLAIRTONE .....	003

CLASSIC .....	805
CLP .....	018
CLP CLASSIC ....	007 006 002
COLORTYME ...	002 502 602
CONCERTO .....	002 502
CONCIERGE .....	713
CONTEC/CONY 003	802 805
.....	902 906
CRAIG .....	805 906
CROWN .....	805 906
CURTIS MATHES .....	002 103
.....	112 502 506
.....	512 601 701 704
CXC .....	805 906
DAEWOO .....	002 102 110
.....	214 303 311 314
.....	403 407 415 502 503
.....	611 614 805 809 909
DAYTRON .....	002 502
DIMENSIA .....	601 704
DUMONT .....	002 713
DYNASTY .....	805
ELEKTRA .....	701
ELECTROBAND .....	003 801
ELECTROHOME .....	002 502
.....	803 901 914
EMERSON .	002 003 004 005
.....	104 105 106 115 204
.....	205 206 213 304 305 316
.....	319 405 502 505 506 519
.....	604 605 705 804 805 903
.....	904 905 906
ENVISION .....	002 502



FISHER .....506 522  
 ..... 606 619 902  
 FUJITSU .....206 321  
 FUNAI .....206 805 906  
 FUTURETEC .....805 906  
 GE .....002 006 007 018 107  
 ..... 114 310 312 502 601  
 ..... 704 719 803 806 810  
 .....901 911  
 GIBRALTER .....002 713  
 GOLDSTAR 002 102 117 207  
 ..... 217 307 502 818 914  
 GRUNDY .....206 906  
 HALLMARK .....002 502  
 HARVARD .....906  
 HITACHI .....002 016 116 216  
 ..... 315 410 502 507 515  
 ..... 519 607 615 622 701  
 ..... 707 710 715 815 902 915  
 IMA .....906  
 INFINITY .....807  
 INTEQ .....713  
 JANEIL .....019  
 JBL .....807  
 JCB .....801  
 JC PENNY .....002 007 102  
 ..... 107 112 310 312  
 ..... 402 502 512 601 704  
 ..... 719 803 806 818 907  
 JENSEN .....002 502  
 JVC .....007 107 108  
 ..... 308 510 607 902  
 KAWASHO .....002 502 801  
 KAYPANI .....119  
 KEC .....805  
 KENWOOD .....002 502 914  
 KLOSS NOVABEAM .....019  
 .....408 508  
 KONKA .....203 208 219  
 ..... 306 317 417  
 KTV .....003 213 319  
 ..... 608 703 805 906  
 LODGENET .....601 701  
 LOEWE .....722 807  
 LOGIK .....601 701  
 LUXMAN .....002 502  
 LXI .....002 312 502 506  
 ..... 512 601 704 719 807  
 MAGNAVOX .....002 009 109  
 ..... 118 209 309 402 408  
 ..... 502 508 510 807 914 917  
 MAJESTIC .....601 701  
 MARANTZ .....002 502 807  
 MEGATRON .....002 502 507  
 MEI .....003  
 MEMOREX .....002 115 206  
 ..... 502 506 601 701 706  
 MGA .....002 102 206  
 ..... 502 619 803 914  
 MIDLAND .....007 107 312  
 ..... 713 719 818  
 MINUTZ .....806  
 MITSUBISHI .....002 102 206  
 ..... 502 510 619  
 ..... 709 803 814 914  
 MONTGOMERY WARD 601  
 .....701

MOTOROLA .....901 918  
 MTC .....002 003 102  
 ..... 112 502 512  
 MULTITECH .....906  
 MULTIVISION .....010  
 NAD .....002 120 502 512  
 NEC .....002 102 110 111  
 ..... 502 510 602 901  
 NIKEI .....805  
 NIKKO .....002 407 502  
 NTC .....407  
 ONKING .....805  
 ONWA .....805 906  
 OPTIMUS .....120 618  
 OPTONICA .....111 918  
 ORION .....105 115 713  
 PANASONIC .....007 107 416  
 ..... 516 608 618 718 807 901  
 PHILCO .....002 009 102 109  
 ..... 309 402 408 502  
 ..... 508 807 901 914  
 PHILIPS .....002 009 020 109  
 ..... 122 202 209 210 222  
 ..... 310 322 402 408 422  
 ..... 508 510 807 822 901  
 ..... 914 917 919 922  
 PHILIPS/MAGNAVOX ... 020  
 .....422 919 922  
 PILOT .....002  
 PIONEER .....002 120  
 .....502 519 610  
 PORTLAND .....002 102  
 .....407 502  
 PRECISION .....218  
 PRICE CLUB .....112  
 PRISM .....107  
 PROSCAN ..312 601 704 719  
 PROTON .....002 119 220  
 .....502 820 910  
 PULSAR .....713  
 PULSER .....002  
 QUASAR ...007 107 416 516  
 ..... 608 618 718 807 901  
 RADIO SHACK/REALISTIC .  
 ..... 002 021 111 117 406  
 ..... 502 506 601 618 704  
 ..... 705 805 818 906 914  
 RCA ....002 021 011 102 211  
 ..... 302 312 318 320 406  
 ..... 409 411 420 502 511 514  
 ..... 519 601702 711 719 809  
 ..... 811 901 909 911 912 914  
 RHAPSODY .....003  
 RUNCO .....713  
 SAMPO .....002 119 502 818  
 SAMSUNG ..002 012 102 103  
 ..... 112 212 502 512 818 914  
 SAMSUX .....502  
 SANSUI .....115 215  
 SANYO .....002 412 506  
 .....522 612 619 902  
 SCOTCH .....002 502  
 SCOTT .....002 004 105  
 .....206 502 805 906  
 SEARS .....002 112 206 312  
 .....502 506 512 520 601  
 ..... 612 619 704 719 902 914

SHARP 002 013 014 111 502  
 ..... 509 712 812 813 913 918  
 SHOGUN .....002  
 SIGNATURE .....601 701 903  
 SIMPSON .....402  
 SONIC .....003  
 SONY .....202 414 708 801  
 SOUNDESIGN ..002 206 402  
 .....502 805 906  
 SPECTRAVISION .....921  
 SQUAREVIEW .....520  
 SSS .....002 805 906  
 STARLITE .....906  
 SUPREMACY .....019  
 SUPREME .....801  
 SYLVANIA .....002 009 109  
 ..... 209 309 402 408 502  
 ..... 508 717 807 914 917  
 SYMPHONIC .....520 904 906  
 TANDY .....918  
 TATUNG .....901  
 TECHNICS .....007 107  
 TECHWOOD .....002 007  
 .....107 502  
 TEKNIKA ..002 019 102 112  
 ..... 206 209 402 407 502 512  
 ..... 601 618 701 805 902 906  
 TELECAPTION .....313  
 TELERENT .....601 701  
 TERA .....002 220  
 TMK .....002 502  
 TOSHIBA ...112 313 413 419  
 ..... 506 510 512 517 613 902  
 UNIVERSAL .....310 806  
 VICTOR .....607  
 VIDTECH .....002 102 502  
 VIKING .....019  
 WARDS .....002 004 009 102  
 ..... 109 111 206 209 310  
 ..... 408 502 508 513 601  
 ..... 701 704 806 807 914  
 WHITE WESTINGHOUSE ...  
 .....311 611  
 YAMAHA ...002 102 502 914  
 ZENITH .....002 008 115 215  
 .....405 407 507 601  
 .....701 713 903 916

MAGNAVOX .....441 442  
 MARANTZ .....441 442  
 MITSUBISHI .....841  
 MUSTEK .....744  
 NAD .....944  
 NAKAMICHI .....844  
 ONKYO .....843  
 OPTIMUS .....042 545  
 ORITRON .....143  
 PANASONIC .....641 741  
 PHILIPS .....441 442 943  
 PIONEER .....042 545  
 PROSCAN .....941  
 RADIOSHACK .....835 945  
 RCA .....644 835 941 945  
 SAMSUNG .....342  
 SAMPO .....343  
 SEG .....444  
 SHARP .....341  
 SHERWOOD .....144  
 SHINCO .....644  
 SONY .....541  
 TEAC .....042 545  
 THETA DIGITAL ....042 545  
 TOSHIBA .....441 245  
 WHARFEDALE .....845  
 YAMAHA .....641 643  
 YAMAKAWA .....445  
 ZENITH .....241 142 345

## Laser Disc

DENON .....132  
 PIONEER .....132  
 PROSCAN .....432  
 RCA .....432  
 SANYO .....824  
 SONY .....933  
 ZENITH .....824

## Cable

ABC .....048 148 248  
 .....348 747 847 947  
 ALLEGRO .....054 154  
 AMERICAST .....354  
 ANTRONIX .....448 548  
 ARCHER ....448 548 648 748  
 CABLETENNA .....448  
 CABLEVIEW .....448  
 CENTURY .....748  
 CITIZEN .....748  
 COLOUR VOICE .....848 948  
 COMTRONICS .....049 149  
 CONTEC/CONY .....249  
 EASTERN .....349  
 GARRARD .....748  
 GC ELECTRONICS .....548  
 GEMINI .....449 549  
 GE .....556  
 GENERAL INSTRUMENT ...  
 ..... 053 453 454 552 554  
 ..... 654 752 754 947 952  
 HAMLIN .....649 749 849  
 HITACHI .....947

## DVD

AIWA .....043  
 AKAI .....141  
 APEX .....044  
 DAEWOO .....645 745  
 DENON .....641 743  
 ELTA .....045 145  
 EMERSON .....241  
 FISHER .....243  
 GE .....644  
 GO-VIDEO .....342 244  
 HITACHI .....042 543 545  
 HARMAN/KARDON .....344  
 JVC .....242 443  
 INTEGRA .....843  
 KENWOOD .....641 544  
 KONKA .....642 742 842 942







HYTEX ..... 847  
 JASCO ..... 748  
 JERROLD ..... 048 050 148  
 ..... 254 348 449 454 552  
 ..... 554 652 747 752 947  
 MAGNAVOX ..... 150  
 MEMOREX ..... 250  
 MOVIE TIME ..... 350 847  
 NSC ..... 350 847  
 OAK ..... 249 550 847  
 PACE ..... 854  
 PANASONIC ..... 452 647  
 PARAGON ..... 250  
 PHILIPS ..... 150 549 650 748  
 ..... 750 848 850 948  
 PIONEER ..... 051 451 950  
 PULSAR ..... 250  
 RADIO SHACK .055 152 154  
 RCA ..... 352 647  
 REALISTIC ..... 548  
 REGAL ..... 849  
 REGENCY ..... 349  
 REMBRANDT ..... 947  
 RUNCO ..... 250  
 SAMSUNG ..... 049 051  
 SCIENTIFIC ATLANTA 248  
 ..... 251 351 451  
 SIGNAL ..... 049 449  
 SIGNATURE ..... 947  
 SL MARX ..... 049  
 SPRUCER ..... 647  
 STANDARD COMPONENTS  
 ..... 551  
 STARCOM ..... 348 449 747  
 STARGATE ..... 049 449  
 STAR SIGHT ..... 653  
 STAR SIGHT CABLE  
 SERVICE ..... 352  
 STARQUEST ..... 449  
 STAR TRAK ..... 253  
 TANDY ..... 651  
 TELEVIEW ..... 049  
 TELEWEST ..... 854  
 TEXSCAN ..... 551  
 TOCOM ..... 048 751 952  
 TOSHIBA ..... 250  
 TUSA ..... 449  
 TV86 ..... 350  
 UNIKA ..... 448 548 748  
 UNITED ARTISTS ..... 847  
 UNITED CABLE ..... 747  
 UNIVERSAL ..... 448 548  
 ..... 648 748 851  
 VIDEOWAY ..... 052  
 VIEWSTAR 149 150 350 651  
 VIDEO TECH ..... 656  
 ZENITH ..... 054 154 250  
 ..... 353 354 450 553 653  
 ..... 753 853 951 953 954

**VCR**

ADMIRAL ..... 224  
 ADVENTURA ..... 726  
 AIKO ..... 826  
 AIWA ..... 126 324 528 726  
 AKAI ..... 027 235 335 424  
 ..... 524 624 724 924  
 ALLEGRO ..... 326 534 925  
 AMERICAN HIGH ... 130 226  
 ASHA ..... 425  
 AUDIO DYNAMICS .025 436  
 AUDIOVOX ..... 525  
 DAEWOO ..... 529  
 BELL & HOWELL ..... 428  
 BEAUMARK ..... 425  
 BROKSONIC ..... 227 325  
 ..... 530 626 632  
 CALIX ..... 525  
 CANDLE ..... 025 026 425  
 ..... 525 625 725 825  
 CANNON ... 130 226 535 635  
 CAPEHART ..... 135 534  
 CARVER ..... 330  
 CCE ..... 230 826  
 CITIZEN ... 025 026 425 525  
 ..... 625 725 825 826  
 COLORTYME ..... 025  
 COLT ..... 230  
 CRAIG ..... 230 425 426 525  
 CURTIS MATHES ..... 025  
 ..... 124 130 226 324  
 ..... 425 526 635 725  
 CYBERNEX ..... 425  
 DAEWOO ..026 135 625 626  
 ..... 726 825 826 926  
 DAYTRON ..... 135  
 DBX ..... 025 436  
 DIMENSIA ..... 124  
 DYNATECH ..... 324 726  
 ELECTROHOME ....027 525  
 ELECTROPHONIC ..... 525  
 EMERSON ..... 027 028 127  
 .... 128 130 226 227 228 324  
 .... 325 327 427 428 525 526  
 .... 527 528 625 626 627 628  
 .... 630 634 724 726 727 735  
 ..... 827 828 927  
 FISHER ..... 025 029 129 328  
 ..... 330 426 428 928  
 FUJI ..... 130 226 524  
 FUNAI ..... 324 726 924  
 GARRARD 7 ..... 26  
 GE ..... 124 130 136 226  
 ..... 425 429 635 835  
 GOLDSTAR ..... 025 236 525  
 GRADIENTE ..... 726  
 GO-VIDEO ..... 139 438 537  
 HARLEY DAVIDSON .... 726  
 HARMAN KARDON 025 930  
 HARWOOD ..... 230  
 HEADQUARTER ..... 428  
 HITACHI ... 136 235 324 336  
 ..... 538 629 638 829 834  
 HI-Q ..... 426  
 INSTANT REPLAY ..... 130  
 ..... 226 924  
 INTEQ ..... 525  
 JCL ..... 130 226  
 JC PENNEY ..... 025 130 235  
 ..... 425 428 436 525  
 ..... 629 635 834 935  
 JENSEN ..... 235 629

 
JVC ..... 025 235 239  
 ..... 326 339 428 436  
 KENWOOD ..... 025 235  
 ..... 428 436 725  
 KLH ..... 230 237  
 KODAK ..... 130 226 525  
 LLOYD ..... 324 726  
 LOGIK ..... 230  
 LXI ..... 525  
 MAGNAVOX . 130 226 330 5  
 ..... 34 536 635 734  
 MAGNIN ..... 425  
 MARANTZ 025 130 226 330  
 ..... 428 436 530 535 725  
 MARTA ..... 525  
 MATSUSHITA ..... 130 226  
 MEI ..... 130 226  
 MEMOREX ..... 130 224 226  
 ..... 324 335 425 426  
 ..... 428 525 534 726  
 MGA ..... 027 630  
 MGN TECHNOLOGY .... 425  
 MIDLAND ..... 429  
 MINOLTA ..... 629 834  
 MITSUBISHI .... 027 031 131  
 ..... 229 231 329 431 436  
 ..... 531 629 630 730 930  
 MONTGOMERY WARD 224  
 ..... 631  
 MOTOROLA .... 130 224 226  
 MTC ..... 324 425 726  
 MULTITECH ..... 324 425  
 ..... 726 429 230  
 NEC .... 025 235 428 526 530  
 ..... 725 731 831 931 436  
 NIKKO ..... 525  
 NOBLEX ..... 425  
 OLYMPUS ..... 130 226  
 OPTIMUS ..... 035 224 525  
 ..... 537 737 837 937  
 OPTONICA ..... 537 631  
 ORION ..... 227  
 PANASONIC ..... 035 039 130  
 ..... 226 635 636 937 938  
 PENTAX ... 136 629 725 834  
 PENTEX RESEARCH .... 025  
 PHILCO ..... 130 226 330 635  
 PHILIPS ..... 130 226 330 430  
 ..... 434 439 536 631  
 ..... 734 738 934 937  
 PHILIPS/MAGNAVOX ... 434  
 ..... 934  
 PILOT 5 ..... 25  
 PIONEER ... 132 232 436 629  
 PORTLAND026 135 725 825  
 PROSCAN ..... 124  
 PROTEC ..... 230  
 PULSAR ..... 534  
 QUARTER ..... 428  
 QUARTZ ..... 428  
 QUASAR ..... 039 130  
 ..... 635 636 937  
 RCA ..... 033 124 130 133 136  
 ..... 226 233 332 424 425  
 ..... 432 532 629 636 732  
 ..... 832 834 835 837 932  
 RADIOSHACK ..027 029 035  
 .... 124 129 130 224 226 324  
 .... 335 425 426 428 525 631  
 .... 635 726 737 835 837 937  
 RADIX ..... 525  
 RANDEX ..... 525  
 REALISTIC ..... 027 029 035  
 .... 124 129 130 224 226 324  
 .... 335 425 426 428 525 631  
 ..... 635 726 737 837 937  
 REPLAY ..... 938  
 RICOH ..... 936  
 RUNCO ..... 534  
 SAMSUNG ..037 335 425 427  
 ..... 429 537 624 625 629  
 SANKY ..... 224 534  
 SANSUI ..... 235 333 436  
 SANYO ..... 328 425 426 428  
 SCOTT ..... 325 327 433 625  
 ..... 626 630 735 927  
 SEARS ..... 029 129 130 226  
 ..... 330 426 428 525  
 ..... 629 834 928 935  
 SHARP ..... 027 224 324 338  
 ..... 631 637 737 825  
 SHINTOM ..... 230 337  
 ..... 524 629 936  
 SHOGUN ..... 425  
 SIGNATURE ..... 324  
 SINGER ..... 130 226 230  
 SONY ..... 034 038 138  
 ..... 238 524 838 936  
 STS ..... 130 226 629 834  
 SYLVANIA ..... 130 324 330  
 ..... 536 630 635 726  
 SYMPHONIC ..... 225 324 726  
 TANDY ..... 324 428  
 TASHIKO ..... 525  
 TATUNG ..... 235  
 TEAC ..... 235 324 726  
 TECHNICS ..... 035 130 226  
 TEKNIKA ..... 130 134 226  
 ..... 324 525 726  
 TiVo ..... 738 838  
 TOSHIBA ..... 029 330 433  
 ..... 625 629 630 735  
 TOTEVISION ..... 425 525  
 TMK ..... 425 526 828  
 UNITECH ..... 425  
 VECTOR RESEARCH .... 025  
 ..... 436 625 725  
 VICTOR ..... 436  
 VIDEO CONCEPTS ..025 027  
 ..... 436 625 725  
 VIDEOSONIC ..... 425  
 WARDS ..... 027 130 224 226  
 .... 230 234 324 425 426 525  
 .... 625 629 631 726 735 834  
 WHITE WESTINGHOUSE ...  
 ..... 324 924  
 XR-1000 .... 130 226 230 726  
 YAMAHA ... 025 235 428 436  
 ZENITH .... 030 036 125 326  
 .... 436 437 524 525 534 632  
 .... 638 729 824 925 929 936

## Product Operation

After the batteries are installed and you have programmed the remote for the codes that operate your products, you can use your remote to operate a TV, VCR, Cable Box, etc.




TV (Press **TV** First)



VCR  
(Press **VCR** First)



 DVD Player  
(Press **DVD** first)




Cable Box  
(Press **CBL** first)



### To Operate:

 1. Press the TV, VCR, DVD, CBL, etc. button (depending on which product you want to operate).
2. Aim the remote at the product.
3. Press POWER to turn on the product.
4. Press other buttons to operate the features of your product.

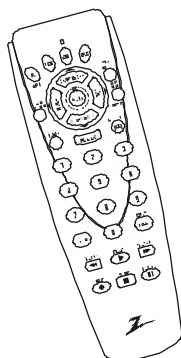

## Troubleshooting

### Remote does not operate your product.

- Press the mode button of the product you want to control.
- Program the remote with a new code.
- Install new batteries. (You might have to reprogram your remote after installing new batteries.)
- Remote may not be compatible with your product.

### Remote does not operate some features of your product.

- Program remote with a new code.
- Remote may not be able to operate all features of your product or button names might be different than your product.

### Indicator light blinks after you program a product code.

- Remote did not accept the code.
- Try to program the code again or try a different code.



## 90 Day Warranty

This product is manufactured to ZENITH specifications and is free from defects in material, workmanship and assembly. This warranty extends only to the original purchaser and is nontransferable. Should a defect occur under normal operating conditions within 90 days from the date of purchase, ZENITH will provide a comparable replacement free of charge within the warranty period, to the original purchaser. Defective product must be returned, with the dated proof of purchase, to the place of purchase for replacement. This warranty does not extend to the product if it has been damaged or rendered defective as a result of accident, misuse, abuse, tampering with or modification. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ZENITH BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT OR NEGLIGENCE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some States do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific rights and you may also have other rights, which vary from State to State.

Made in China-TC, Quality Assured in USA  
Clifton, NJ 07014-1115

ZN411  
Back  
Cover Art

